

Diesel engine OM 615


and gasoline engines, special version
with oil bath air filter

Every 5000 km/3000 miles

Every 7500 km/5000 miles

Type of oil

Engine oil as specified for the engine

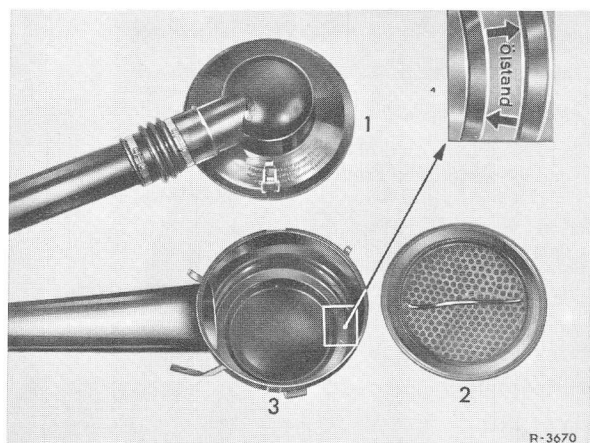

- Remove filter cover, remove filter element.
- Check oil level in filter housing.
- If required, add engine oil up to upper mark on filter housing.

Note: If highly contaminated (dust deposited in filter housing) clean oil bath air filter and replace oil charge (refer to item 205).