

At the 1st and 2nd maintenance jobs

All types

## Type of oil

 
For rear axle <b>without</b> limited slip approved oils	Hypoid transmission oil SAE 90 see: Operative Materials	Page 235
For rear axle <b>with</b> limited slip approved oils (observe reference plate on rear axle housing)	Special hypoid transmission oil SAE 90 see: Operative Materials	Page 235.3

## Oil quantities

Type	liters
100	3.25
107 116.028 116.032 116.033	1.3
108 109 111 113	2.5
114 116.020 116.024	1.0
115	1.15

## Special tools

Pin spanner SW 14 x 17 mm  
Insert for pin spanner



000 589 24 07 00  
000 589 24 07 01

Screw driver insert SW 14 1/2"



commercially available e. g. Hazet 985-14


## Note

When checking and changing oil vehicle must be free standing on wheels.

Before changing oil check sealing on rear axle!


Carefully tighten drain and filler screws.

Continued on next page

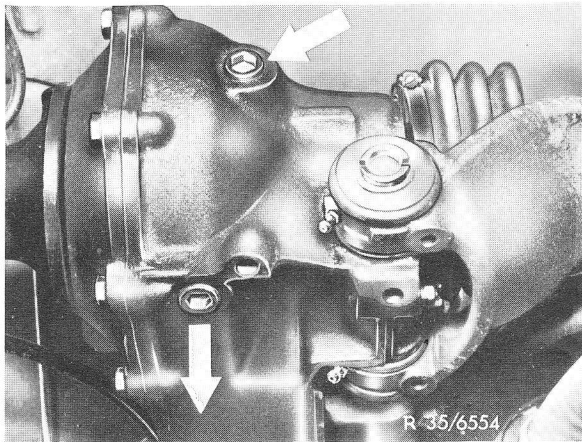


- Top up with recommended quantity of oil.
- Check level of oil: level must reach top of oil filler opening.

Types 100 108 109 111 113

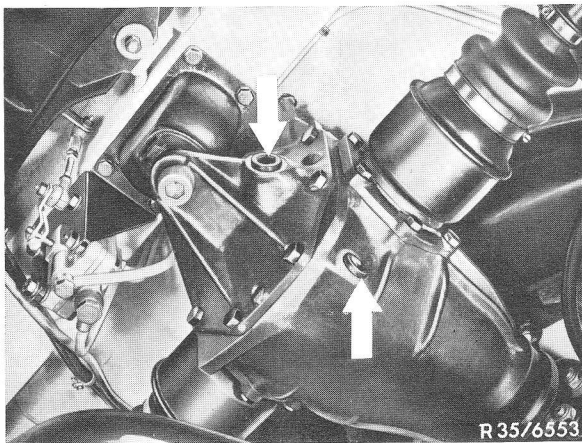

Types 107 114 115 116

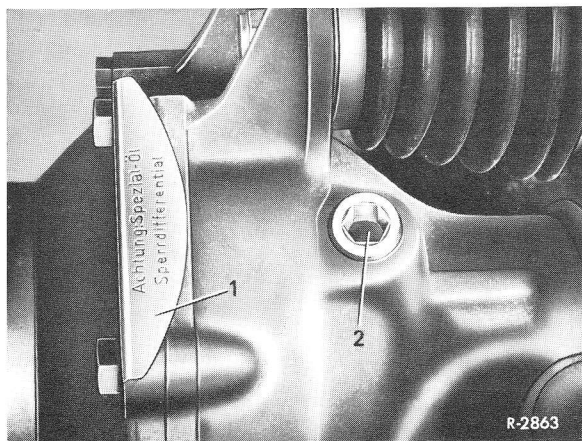

Rear axle with limited slip

- 1 Reference plate for rear axle with limited slip differential
- 2 Closing plug of filler hole