At the first maintenance job

All types

Retighten slip joint bolts.

Except flange joints with spring pretensioning.

