



- 1 Front axle carrier
- 2 Rubber mount for suspension of front axle
- 2a Stop buffer for inward deflection
- 2b Stop plate
- 2c Stop buffer for outward deflections
- 2d Hex. bolt with snap ring
- 2e Fastening nut
- 2f Nut holder
- 3 Lower control arm

- 4 Upper control arm
- 5 Steering knuckle
- 6 Guide joint
- 6d Circlip
- 6f Sleeve
- 6h Clamping ring
- 7 Supporting joint
- 7d Circlip
- 7f Sleeve
- 7h Clamping ring

- 8 Front wheel hub
- 8a Radial sealing ring
- 8b Tapered roller bearing, inside
- 8c Tapered roller bearing, outside
- 8d Washer
- 8e Clamping nut
- 8f Wheel cap
- 8g Contact spring
- 9 Brake disc

- 18 Brake caliper
- 18a Lock washer
- 24 Steering knuckle arm
- 28 Rubber slide bearing
- 29 Rubber bearing (torsion bearing)
- 30 Cam bolt
- 30a Cam washer
- 32 Cover plate
- 33 Holder for brake hose
- 38 Protective cap for steering lock