

Electric Wiring Diagram Model 450 SL/SLC (107.044/024)

- 1 Headlamp unit, left
 - a Turn signal lamp
 - b Parking lamp/standing lamp
 - c High beam
 - d Low beam
 - e Side marker lamp
 - f Fog lamp
- 2 Electric clock
 - a Operation
 - b Illumination
- 3 Seat belt warning lamp
- 4 Instrument cluster
 - a Turn signal indicator lamp, left
 - b Brake fluid and parking brake indicator lamp
 - c Fuel reserve warning lamp
 - d Fuel gauge
 - e Coolant temperature gauge
 - f Indicator lamp, open for option
 - g Indicator lamp, open for option
 - h Instrument lamps
 - i Rheostat, instrument lamps
 - j Revolution counter
 - k Indicator lamp, open for option
 - l Charge indicator lamp
 - m High beam indicator lamp
 - n Turn signal indicator lamp right
- 5 Switch, parking brake
- 6 Temperature sensor, air
- 7 Headlamp unit, right
 - a Turn signal lamp
 - b Parking lamp/standing lamp
 - c High beam
 - d Low beam
 - e Side marker lamp
 - f Fog lamp
- 8 Fuel injection valves with respective cylinder designation
- 9 Temperature sensor, coolant
- 10 Dual-tone horn (fanfares)
- 11 Warning flasher switch
- 12 Glove compartment lamp and hand lamp
- 13 Fuse box
- 14 Temperature sensor, water
- 15 Pressure sensor

- 16 Throttle valve switch
- 17 Electronic control unit, plug board
- 18 Release contacts
- 19 Starter valve
- 20 Thermo-time switch
- 21 Brake fluid indicator lamp switch
- 22 Cigar lighter
- 23 Turn signal and warning flasher relay
- 24 Horn contact
- 25 Combination switch
 - a Turn signal lamp switch
 - b Headlamp flasher switch
 - c Dimmer switch
 - d Wiper switch
 - e Switch wiper speed
 - I Slow wiping
 - II Fast wiping
 - III Intermittent wiping
- 26 Wiper motor
- 27 Automatic antenna*
- 28 Radio
- 29 Stop lamp switch
- 30 Electromagnetic clutch, refrigerant compressor
- 31 Relay, air conditioner/starter
- 32 Main relay, electronic injection
- 33 Relay, fuel pump
- 34 Relay, starter valve
- 35 Starter lockout and back-up lamp switch
- 36 Solenoid valve, automatic transmission
- 37 Lighting switch
- 38 Ignition starter switch
- 39 Washer switch
- 40 Washer pump
- 41 Blower motor
- 42 Distributor
- 43 Spark plugs
- 44 Door contact switch, right
- 45 Entrance lamp, right
- 46 Blower switch with lamp
- 47 Illumination, heater controls
- 48 Switch-over valve, ignition advance/emission gas recirculation
- 49 Kick-down switch
- 50 Relay, switch-over valve, ignition

- 51 Relay, auxiliary fan
- 52 Relay, separation air conditioner (auxiliary fan) from ignition change-over
- 53 Auxiliary fan
- 54 Fuel pump
- 55 Plug connection, tail lamp cable harness
- 56 Temperature control with lighting, air conditioner
- 57 Pre-resistance, blower motor
- 58 Door contact switch, left
- 59 Pre-resistance 0.4 Ω
- 60 Ignition coil
- 61 Pre-resistance 0.6 Ω
- 62 Entrance lamp, left
- 63 Transistorized ignition switching unit
- 64 Safety belt warning system
 - a Driver's seat retractor switch
 - b Passenger's seat retractor switch
 - c Switch in front passenger seat
- 65 Warning buzzer contact
- 66 Warning buzzer
- 67 Relay, warning system
- 68 Alternator
- 69 Alternator regulator
- 70 Starter
- 71 Trunk lamp
- 72 Battery
- 73 Fuel gauge sending unit
- 74 Micro switch, heater control system
- 75 Micro switch, heater control system
- 76 Temperature switch 62 °C (144 °F) receiver drier, air conditioner
- 77 Temperature switch 100 °C (212 °F)
- 78 3-way valve, heater control system
- 79 3-way valve, heater control system
- 80 Tail lamp unit, right
 - a Side marker lamp
 - b Turn signal lamp
 - c Tail/standing lamp
 - d Back-up lamp
 - e Stop lamp
- 81 License plate lamp

- 82 Tail lamp unit, left
 - a Side marker lamp
 - b Turn signal lamp
 - c Tail/standing lamp
 - d Back-up lamp
 - e Stop lamp

* Special equipment

Wire Color Code

- bl = blue
- br = brown
- el = ivory
- ge = yellow
- gn = green
- gr = grey
- nf = neutral
- rs = pink
- rt = red
- sw = black
- vi = purple
- ws = white

Example:

Wire designation 1.5 gr/rt
Basic color gr = grey
Identification color rt = red
Cross section of wire 1.5 = 1.5 mm²

14311/79 e

