Note

Spare bodies available from the Sindelfingen Plant are provided with a prime coating and unsanded. Condition at delivery corresponds as a rule to the latest date of series design.

The closing washers and rubber plugs, in addition to various other small parts, are included in a cellophane bag with each spare body. Their place of application is shown in Fig. 1.

Installation of Small Parts Supplied in Bag

Due to the system of immersion priming used, the bodies are provided with a number of paint runoff holes, which must be closed again with closing washers and rubber plugs. A large number of these closing washers and rubber plugs are already installed in spare body.

The holes which are still open are plug holes and must be closed upon painting and subsequent cavity preservation.

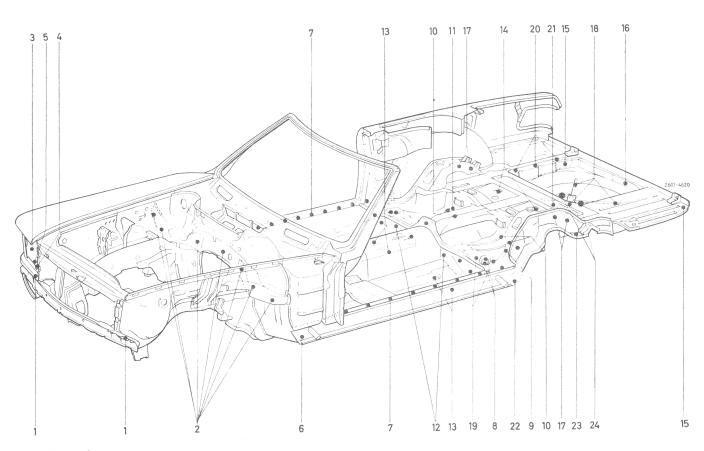


Figure 1

| Item | Designation | Part No. | Place of Application | Each |
|------|----------------|---------------|---|------|
| 1 | Closing washer | 113 987 00 44 | Cross member front, shell rear left and right | 2 |
| 2 | Closing washer | 113 987 00 44 | Reinforcement on front wall | 7 |
| 3 | Closing washer | 110 987 12 44 | For closing through holes on headlamp cup left and right | 2 |
| 4 | Rubber plug | 111 987 12 15 | For paint drain hole in headlamp cup left and right | 2 |
| 5 | Sleeve | 111 997 12 81 | For water runoff in headlamp cup left and right | 2 |
| 6 | Closing washer | 113 987 00 44 | For closing holes in side member outside front bottom left and right | 2 |
| 7 | Closing washer | 113 987 00 44 | For side member outside shell inside left and right | 20 |
| 8 | Rubber plug | 111 987 12 15 | In cover supporting bearing left and right | 4 |
| 9 | Rubber plug | 110 987 00 39 | For floor under occasional seat left | 1 |
| 10 | Rubber plug | 111 987 12 15 | For floor under occasional seat left and right | 4 |
| 11 | Closing washer | 110 987 05 44 | For floor under occasional seat right | 1 |
| 12 | Closing washer | 113 987 00 44 | For closing holes in cross member under occasional seat | 9 |
| 13 | Closing washer | 113 987 00 44 | For sealing holes in main floor left and right | 4 |
| 14 | Closing washer | 113 987 00 44 | For closing holes in rear floor above cross member | 2 |
| 15 | Rubber plug | 110 987 00 39 | For rear floor left and right | 2 |
| 16 | Closing washer | 113 987 00 44 | For closing hole in cross member rear | 1 |
| 17 | Closing washer | 113 987 00 44 | For closing holes in side member rear in trunk compartment left and right | 4 |
| 18 | Rubber plug | 111 987 12 15 | For holes in spare wheel recess | 3 |
| 19 | Closing washer | 113 987 00 44 | For mounting supporting bearing left and right | 4 |
| 20 | Closing washer | 113 987 00 44 | For closing holes in side member rear bottom right | 3 |
| 21 | Sleeve | 111 997 12 81 | For water drain in spare wheel recess | 1 |
| 22 | Closing washer | 113 987 00 44 | For side member outside rear bottom left and right | 2 |
| 23 | Closing washer | 115 987 04 44 | For closing oblong holes in side member left and right | 4 |
| 24 | Сар | 113 683 01 10 | For closing paint drain holes in spare wheel recess | 2 |