

Removal

- 1 Remove steering wheel (46.1–610).
- 2 Remove driver's and front passenger's seat (91.1–100).
- 3 Remove both floor mats in front.
- 4 Remove cover on shift lever (68.1–230).
- 5 Remove both covers under instrument panel (68.1–150).
- 6 Remove screws (1) at rear of tunnel (Fig. 1).

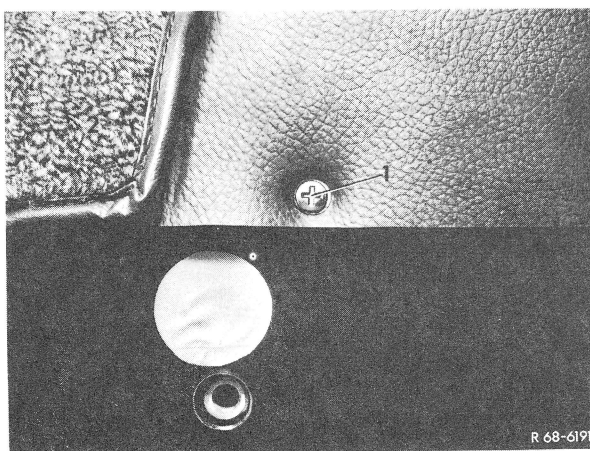


Fig. 1

- 1 Screw on tunnel
- 2 Carpet on tunnel

- 7 Loosen carpet (2) on tunnel from center console..
- 8 Remove screws (3) left and right on front wall (Fig. 2).

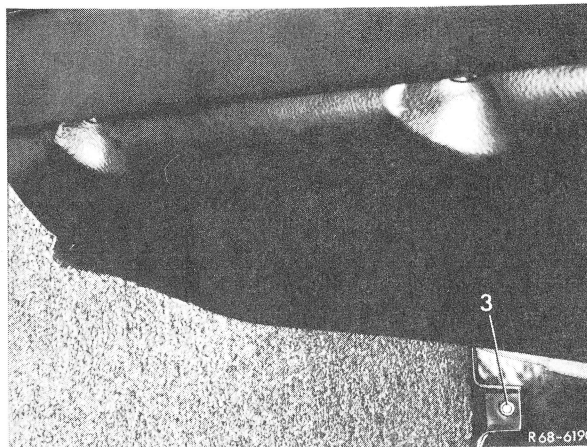


Fig. 2

- 3 Screw on front wall

- 9 Pull out heater control lever.

- 10 Force molding (4) on control levers at upper end out of housing with plastic wedge (Fig. 3).

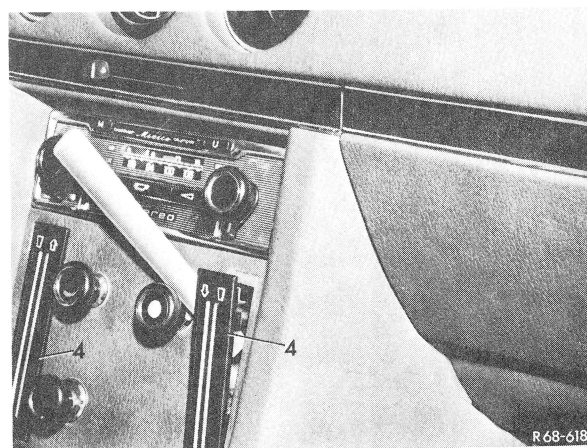


Fig. 3

- 4 Molding at control levers

- 11 Unscrew the two screws (5) on cover (6) (Fig. 4).
- 12 Remove cover with switches and pull off plugs.
- 13 Remove radio.
- 14 Remove screws (7) (Fig. 5).

68.1 Removal and Installation of Center Console

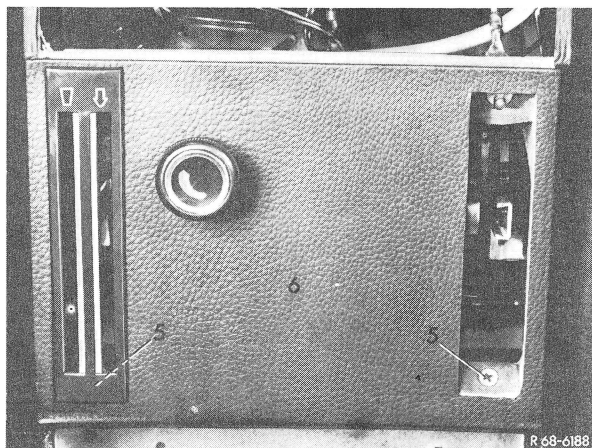


Fig. 4

- 5 Screws on cover
- 6 Cover

15 Disconnect connecting cable for both lights (8) on cable connector (9) and pull off lighting cable (10).

16 Only with automatic transmission: Loosen gate plate on floor shift.

17 Remove center console in rearward direction.

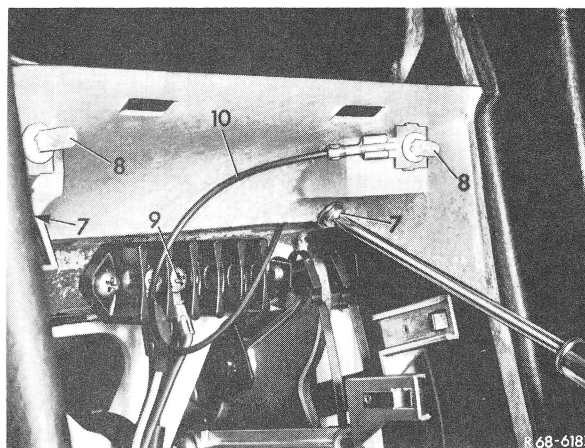


Fig. 5

- 7 Screws on instrument panel
- 8 Light
- 9 Cable connector
- 10 Lighting cable

Installation

18 For installation proceed vice versa.