

## Removal

- 1 Remove lock on coupe top below (77.1–430).
- 2 Remove window molding laterally on top (68.1–425).
- 3 Remove screws (1) and (4).
- 4 Remove window molding laterally below (2).

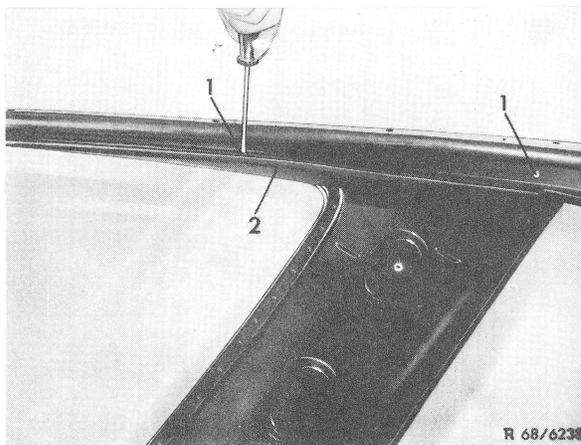


Fig. 1

- 1 Screws on window molding
- 2 Window molding laterally below

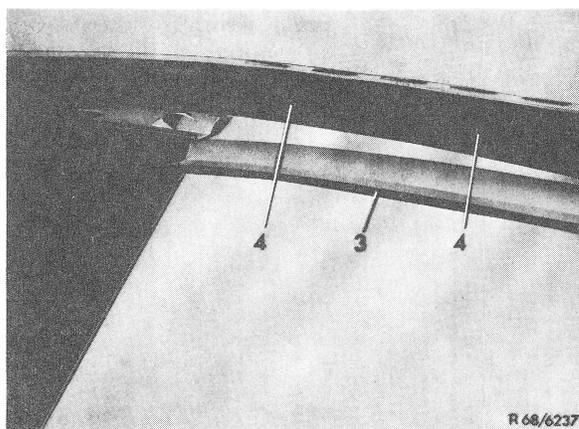


Fig. 2

- 3 Window molding center
- 4 Screws on window molding center

- 5 Remove window molding center (3).

**Note:** If only the window molding (3) is removed, loosen lateral window molding (2) only (Fig. 2).

- 6 Remove expanding clamp (5) on window molding (6) as shown in Fig. 3 and remove window molding (6)

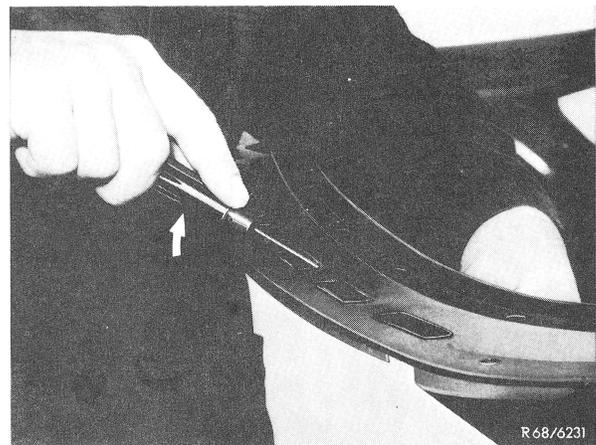


Fig. 3

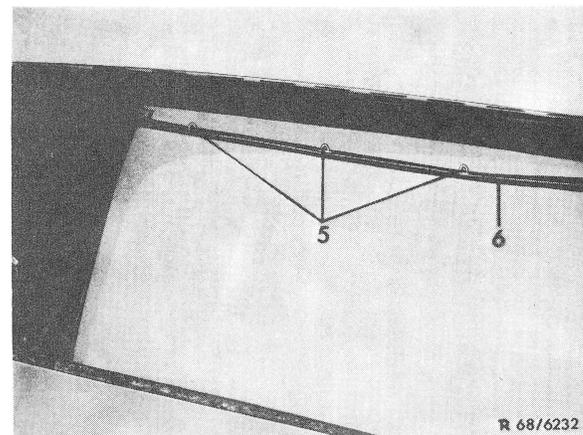


Fig. 4

- 5 Expanding clamp
- 6 Window molding rear

## Installation

- 7 For installation proceed vice versa.