

Removal

- 1** Remove coupe roof and place in inverted condition on a pertinent bench.
- 2** Remove lateral molding strip on coupe roof and center top (68.1–425).
- 3** Remove weather strip on coupe roof (68.1–570).
- 4** Remove seal and sealing strip on coupe roof front.
- 5** Remove lock on coupe roof top (77.1–420).
- 6** Loosen headlining on outer edges of roof.
- 7** Bend up sheet metal clips on both struts.
- 8** Lift off headlining.

Installation

- 9** For installation proceed vice versa.

Note: For glueing headlining, use only foil glue H, Part No. 001 989 30 71.