

Removal

- 1 Remove cover molding (1) at lock end (72.1–130).
- 2 Remove cover molding (2) at hinge end.
- 3 Remove escutcheon (3) on door lock.
- 4 Remove window crank (72.1–110).
- 5 Remove inset (4) on inside door actuation (72.1–120).
- 6 Unscrew screw (5) at front of arm rest (Fig. 1).

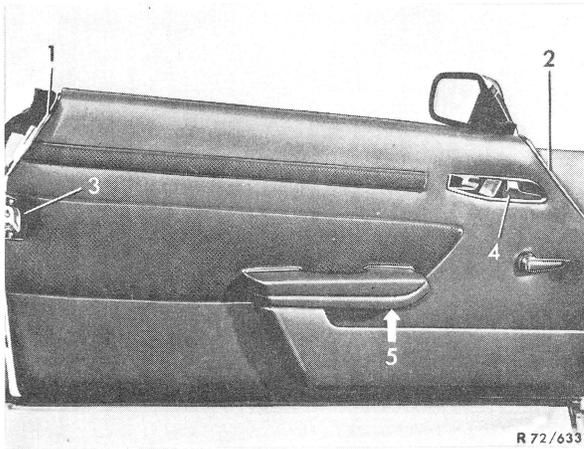


Fig. 1

- 1 Cover molding lock end
- 2 Cover molding hinge end
- 3 Escutcheon on door lock
- 4 Inset on inside door actuation
- 5 Screw on arm rest

7 Pull door lining at bottom and rear from inside door panel, while lifting the clips (6) individually by means of a plastic wedge (Fig. 3).

8 Push door lining with a plastic wedge against upper edge as shown in Fig. 2 out of clips in upward direction.

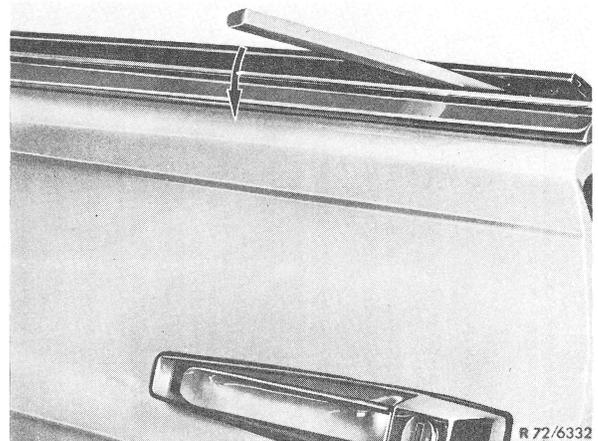


Fig. 2

9 Separate door lining first on rear hook (7) and then on front hook (8) in upward direction.

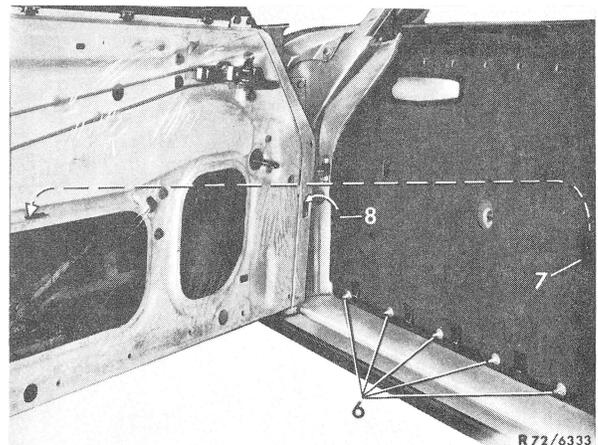


Fig. 3

- 6 Clips on door lining
- 7 Rear hooks
- 8 Front hooks

Installation

10 For installation proceed vice versa.