

Removal and Installation of Inside Sealing Strip **72.1**

107

Removal

- 1 Remove door lining (72.1–100).
- 2 Remove clips for sealing strip in upward direction.
- 3 Remove sealing strip.

Installation

- 4 For installation proceed vice versa.

