

**Tank Flap with Holding Clip**

Type 107.043 **up to** Chassis End No. 004 099

Type 107.044 **up to** Chassis End No. 001 777

- 1 Remove partition (68.1—700).
- 2 Remove both screws (1) while applying counterhold to nuts.
- 3 Remove tank flap with holding clip.

Type 107.043 **as from** Chassis End No. 004 100

Type 107.044 **as from** Chassis End No. 001 778

- 1 Remove both screws (1).
- 2 Remove tank flap with holding clip.

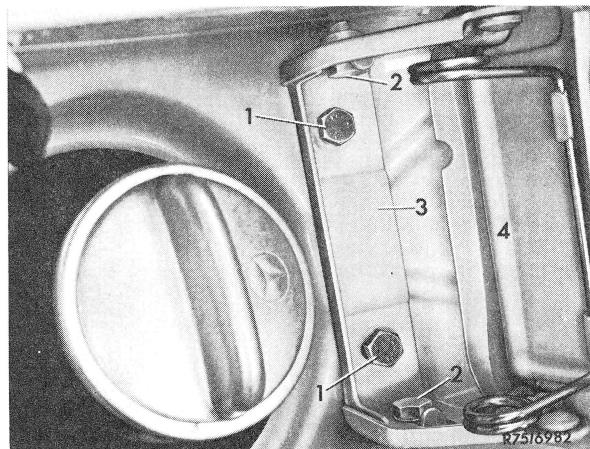


Figure 1

- |                          |                |
|--------------------------|----------------|
| 1 Screws on holding clip | 3 Holding clip |
| 2 Screws for tank flap   | 4 Tank flap    |