

## Removal

**1** Loosen sliding roof headlining (2) with sliding roof opened to 3/4 and remove in forward direction (Fig. 1).

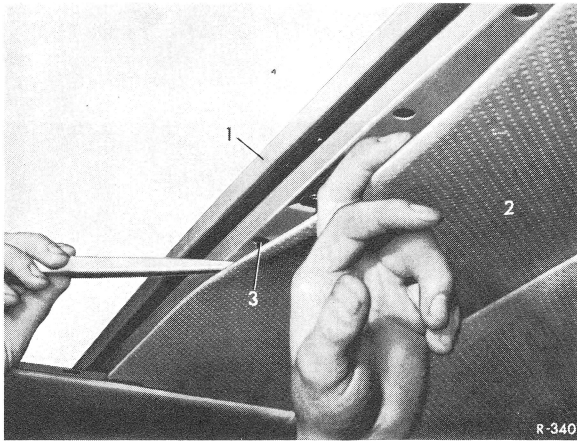


Fig. 1

- 1 Sliding roof cover
- 2 Sliding roof headlining
- 3 Holding clips for sliding roof headlining

**2** Open sliding roof completely and remove sliding rail (12) at left and right (Fig. 2).

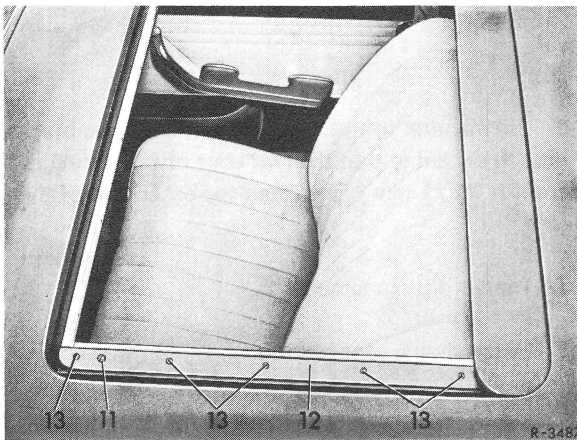


Fig. 2 (shown on Model 114/115)

- 11 Height adjustment front
- 12 Sliding rail
- 13 Fastening screws of sliding rail

**3** Close sliding roof and unscrew locking screw (16) left and right (Fig. 3).

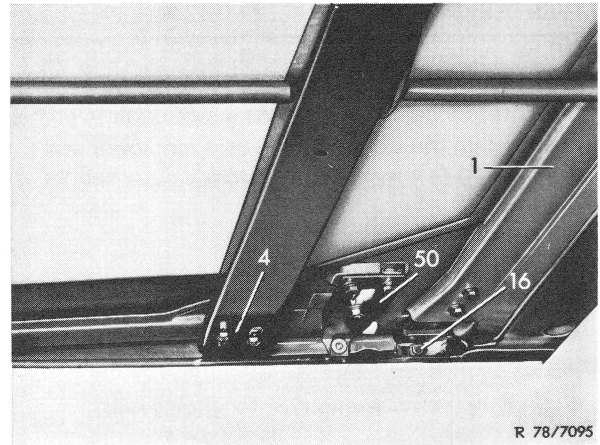


Fig. 3

- 1 Sliding roof cover
- 4 Transporting bridge
- 16 Locking screw
- 50 Angle bracket

**4** Remove connecting clip (7) with sliding roof opened 1/4 (Fig. 4).

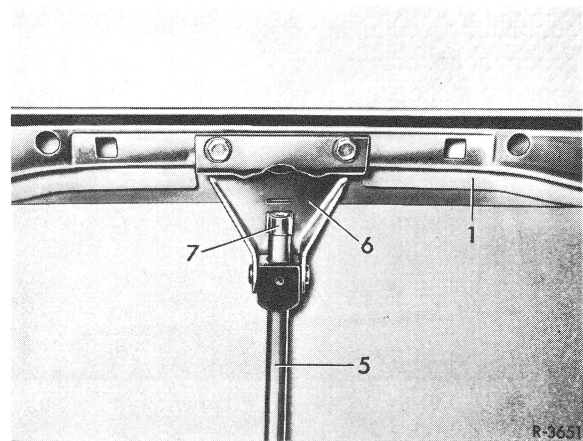


Fig. 4

- 1 Sliding roof cover
- 5 Telescoping tube
- 6 Guide plate
- 7 Connecting clip

**5** Permit teleflex cable control to return and remove sliding roof cover (1) in upward direction.

## Installation

**6** For installation proceed vice versa.

**7** Adjust sliding jaws and sliding roof cover (refer to 77.0-150).