

## Removal

- 1 Remove door lining (body 72.1–100).
- 2 Disconnect safety clip (34) of control rod (2) (Fig. 1).

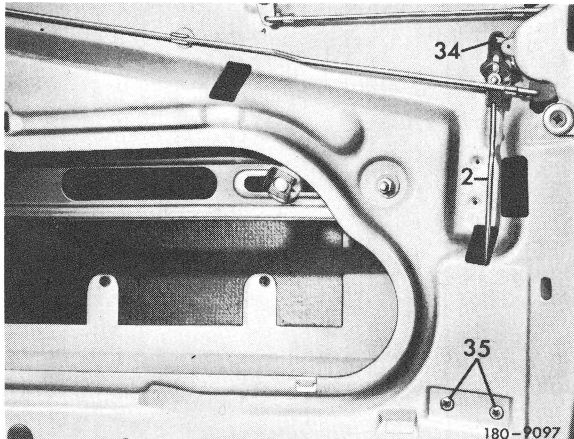


Fig. 1

- |                |                     |
|----------------|---------------------|
| 2 Control rod  | 35 Oval head screws |
| 34 Safety clip |                     |

- 3 Unscrew both oval head screws (35) (Fig. 1).
- 4 Remove vacuum element with control rod.
- 5 Pull connections (17) with interlocking line „white“ (25) top and unlocking line „black“ (26) bottom from vacuum element (1) (Fig. 2).
- 6 Loosen counternut (36) on vacuum element (1) (Fig. 2) and unscrew control rod (2).

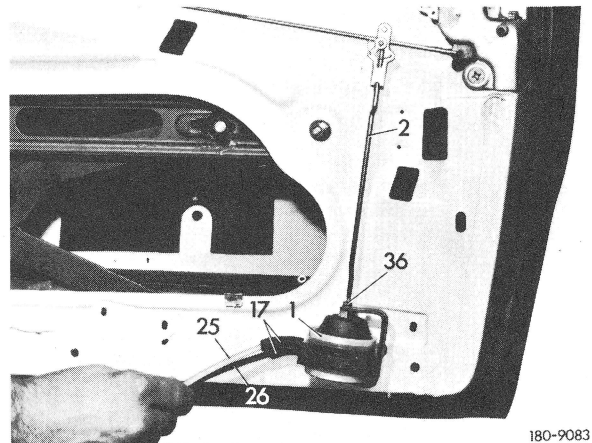


Fig. 2

- |                  |                              |
|------------------|------------------------------|
| 1 Vacuum element | 25 Interlocking line „white“ |
| 2 Control rod    | 26 Unlocking line „black“    |
| 17 Connections   | 36 Counternut                |

## Installation

- 7 Screw control rod (2) into vacuum element (1) up to stop and secure with counternut (36) (Fig. 2).
- 8 Slip interlocking line „white“ (25) top and unlocking line „black“ (26) bottom with connections (17) on vacuum element (1) (Fig. 2).
- 9 Insert vacuum element with control rod into driver's door and screw down with oval head screws (35) (Fig. 1).
- 10 Secure control rod (2) with safety clip (34) on door lock (Fig. 1).
- 11 Install door lining (body 72.1–100).