Removal

1 Unscrew all sheet-metal screws from both fastening rails (56) and remove fastening rails (Fig. 1).

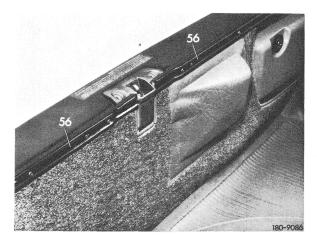


Fig. 1 56 Fastening rails

- 2 Loosen carpet lining and pull to the right.
- **3** Unscrew sheet-metal screws (28) from lefthand cover of rear center piece (29) (Fig. 2).
- **4** Unscrew both oval head screws (30) for vacuum element (Fig. 2).

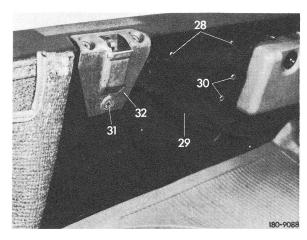


Fig. 2

- 28 Oval head screws
- 29 Cover rear center piece
- 30 Oval head screw
- 31 Countersunk screw
- 32 Lock body

- **5** Remove cover-rear center piece.
- **6** Unscrew countersunk screws (31) and remove lock body (32) (Fig. 2).
- 7 Remove locking ring (33) of control rod (Fig. 3).

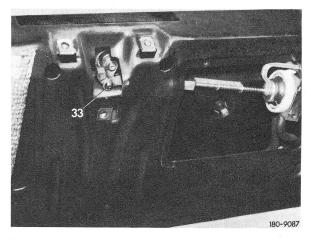


Fig. 3
33 Locking ring

8 Pull out vacuum element (5) and pull connection (17) with interlocking line "white" (25) and unlocking line "black" (26) from vacuum element (Fig. 4).

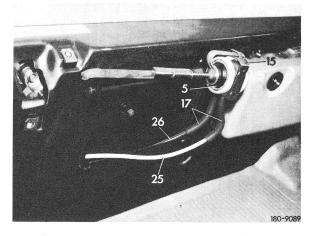


Fig. 4

- 5 Vacuum element 15 Holding spring
- 17 Connection
- 25 Interlocking line "white"
- 26 Unlocking line "black"
- **9** Remove holding spring (15) from vacuum element (5) (Fig. 4).

Installation

- **10** Connect interlocking line "white" (25) and unlocking line "black" (26) with connections (17) to vacuum element (5) (Fig. 4).
- **11** Introduce vacuum element into rear center piece, attach control rod and secure with locking ring (33) (Fig. 3).
- **12** Attach holding spring (15) to vacuum element (5) and screw with oval head screws to lefthand cover rear center piece (29) (Fig. 5).

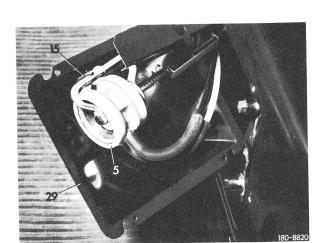


Fig. 5
5 Vacuum element
15 Holding spring

29 Cover-rear center piece

- 13 Insert lefthand cover rear center piece (29) and screw down with oval head screws (28) (Fig. 2).
- 14 Insert lock body (32) and screw down oval head screws (31) (Fig. 2).
- **15** Glue-on carpet lining and screw down both fastening rails (56) by means of oval head screws (Fig. 1).