

## Removal

- 1 Remove cover (1) on blower (Fig. 1).

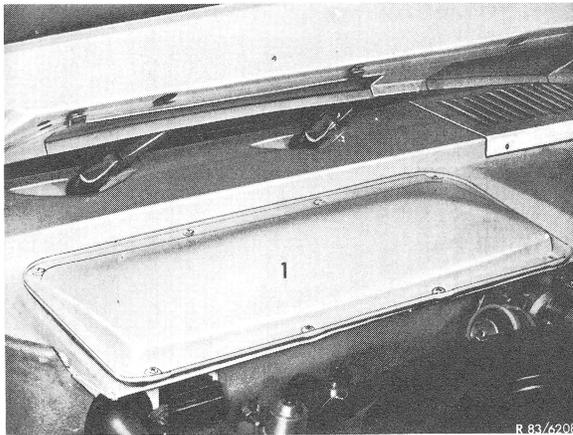


Fig. 1

- 1 Cover on blower

- 2 Loosen the four collar nuts (2) of blower attachment (Fig. 2).

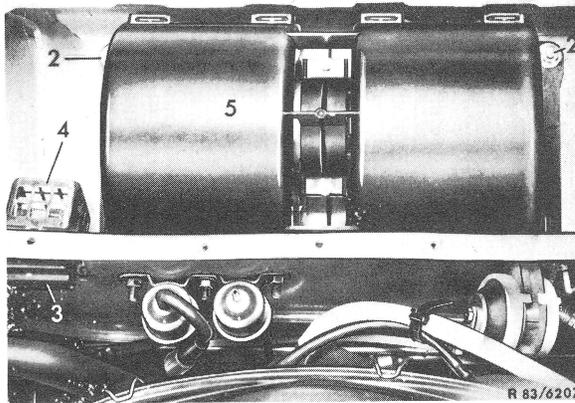


Fig. 2

- |              |                     |
|--------------|---------------------|
| 2 Collar nut | 4 Series resistance |
| 3 Plug       | 5 Blower            |

- 3 Pull plug (3) for series resistance (4) from front wall.
- 4 Remove series resistance.
- 5 Lift connecting cable and remove blower (5) from shaft.

## Installation

- 6 For installation proceed vice versa.

Make sure that the sealing frame is not damaged.