

A Instructions for Use of Service Manuals

Inspection and Adjustment of Valve Clearance

05.1

M 116

Type or unit
designation

Unit version

Group

Designation of
section

Chapter

Section

Page



Engines • Volume 1

210/1

To use this Manual:

Check Group Index to locate job. Group number is listed in upper corner of each page in the group.

Check group contents listing to find chapter and section of exact job description required. Chapter and/or section numbers, succeeded by page numbers within this section, are listed in lower outer corner of page. Section designation is printed next to group on top of page.

Unit Version **0** in the various Groups is **general** information applicable to the pertinent unit.

Unit Version with a **different numeral** is **specific** information for the title vehicle.
