

00.1 Removal and Installation of Engine Mounting Rear

M 116, M 117
(Type 107)

Removal

- 1 Loosen fastening bolts (19).

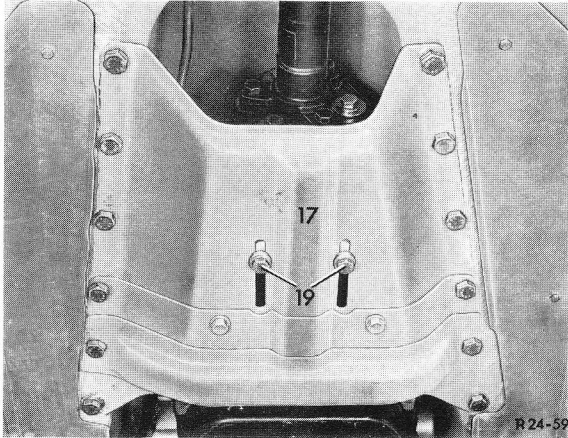


Fig. 1
17 Transmission tunnel closing plate
19 Fastening bolts

- 2 Support transmission, while placing suitable shim under transmission.

- 3 Unscrew transmission tunnel closing plate (17).

- 4 Remove engine mounting (18) from transmission (Fig. 2).

Installation

- 5 For installation proceed vice versa to removal.

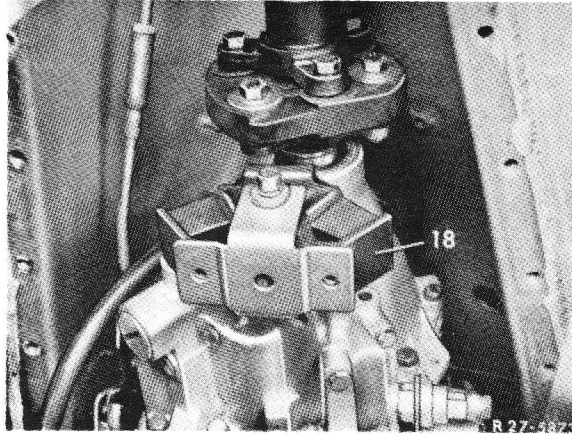


Fig. 2
18 Engine mounting