

Air Cleaner 1–10

- 1 Ring nut
- 2 Washer
- 3 Air cleaner cover
- 4 Air cleaner cartridge
- 5 Rubber ring
- 6 Air cleaner bottom
- 7 Rubber sealing ring
- 8 Anti-vibration buffer
- 9 Snap ring
- 10 Fastening nut

Intake Manifold 15–38

- 15 Valve connection
- 16 Nut
- 17 Washer
- 18 Gasket
- 19 Idling speed air line
- 20 Screw connection
- 21 Sealing ring
- 22 Intake manifold top
- 23 Holder
- 24 Hex bolt
- 25 Connection
- 26 Sealing ring
- 27 Gasket
- 28 Screw connection
- 29 Sealing ring
- 30 Screw connection
- 31 Sealing ring
- 32 Intake manifold bottom
- 33 Rubber connecting piece
- 34 Hex bolt
- 35 Hex bolt
- 36 Sealing ring
- 37 Closing plug
- 38 Hose piece

