



Coding plug (R 29) . . . . . Remove (54–577)  
 Ohmmeter . . . . . Connect (refer to table)  
 Resistance values . . . . . Check (refer to table), replace coding plug (R 29) if values are deviating.

- a Production date
- b Part number
- c Designation of jack

**Test table – resistance values**

Part number	Connection ohmmeter on jack designation						
	A–D	B–E	D–C	D–H	E–D	E–F	E–G
005 545 07 32	$\infty$	1470–1530 k $\Omega$	0.01–15 $\Omega$	3.21–3.27 k $\Omega$	$\infty$	26.2–27.2 k $\Omega$	501–521 k $\Omega$
005 545 08 32	$\infty$	1470–1530 k $\Omega$	0.01–15 $\Omega$	1.18–2.02 k $\Omega$	$\infty$	25.2–27.2 k $\Omega$	501–521 k $\Omega$

**Conventional tool**

Multimeter	SUN	DMM–5
------------	-----	-------