

54–540 Removal and installation of actuator

Removal


1 Disconnect cable control at control end and then at actuator (1) (54–555).

2 Remove line harness (2), vacuum line (3) and venting line (4) from actuator (1).

3 On models 107.023/024/026/043/044 unscrew actuator (1) with bracket (5) from side member.


4 Loosen nut at rear on bracket of actuator (1) and remove actuator (1).

Models 107.022/042

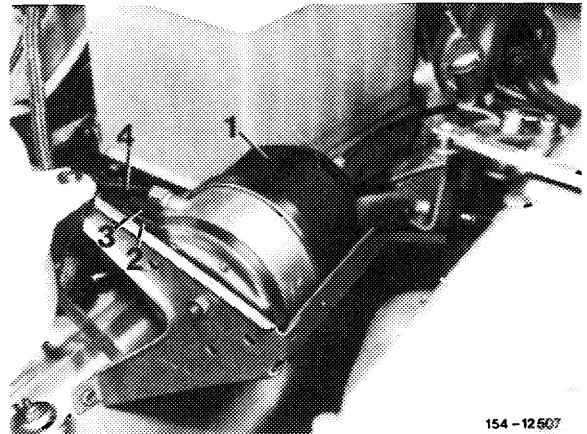


154-12507

Models 107.023/024/026/043/044

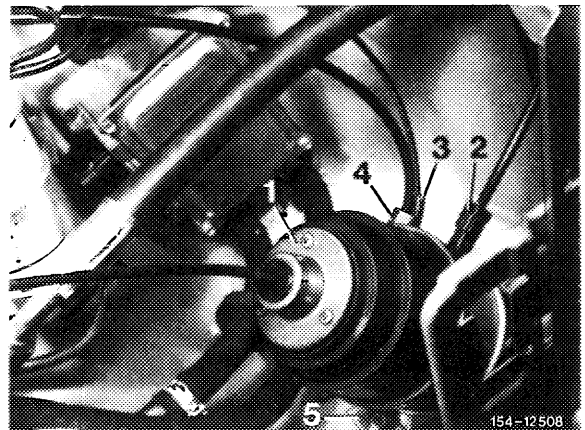


154-12508


Models 114, 115

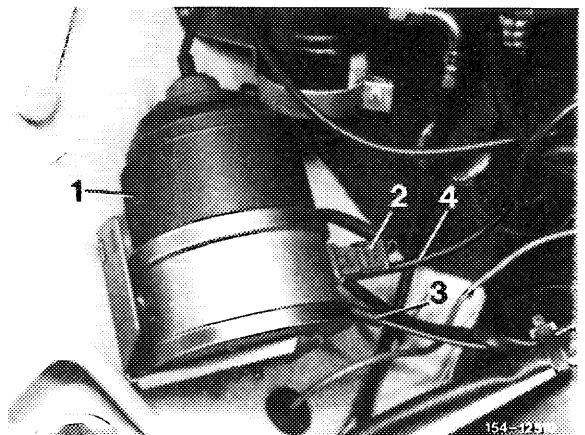

154-12509

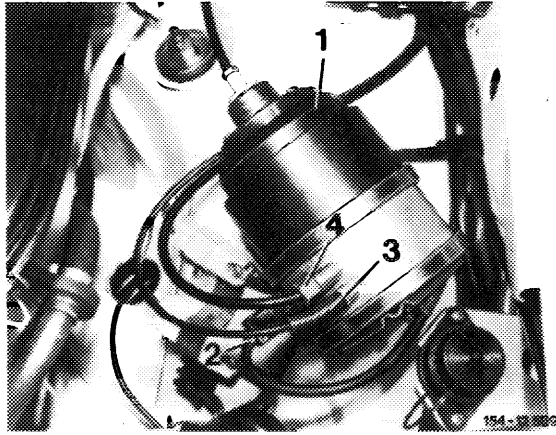

Model 123, lefthand steering

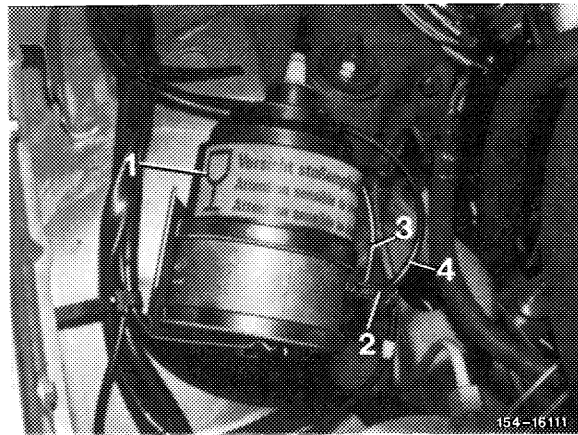

Model 123.033/053/093, righthand steering

Installation

- 5 For installation proceed vice versa.
- 6 Adjust cable control (54--560).
- 7 Perform function test on road.