

COMPONENT LOCATIONS

AUXILIARY FAN

| | | Page-Figure |
|---|--|-------------|
| Auxiliary Fan Motor | Front of radiator | |
| Auxiliary Fan Relay | Top of LH front wheel well, in relay box | 201-2 |
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Receiver Drier Temperature Switch | On receiver drier, behind RH headlights | 202-1 |
| G101 | RH front fender, behind headlights | |
| G102 | Behind instrument cluster | 210-2 |

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ GLOVE BOX LIGHT/ENGINE OVERLOAD PROTECTION

| | | |
|---|--|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Intake Manifold Pressure Switch | Top of intake manifold | |
| Kickdown Solenoid | RH front of transmission | 202-2 |
| Kickdown Switch | Under accelerator pedal | |
| Overload Protection Valve ... | Rear center of engine compartment | |
| Starter Lockout/Backup Light Switch | LH side of transmission | 204-1 |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |

(Chart continued on next page)

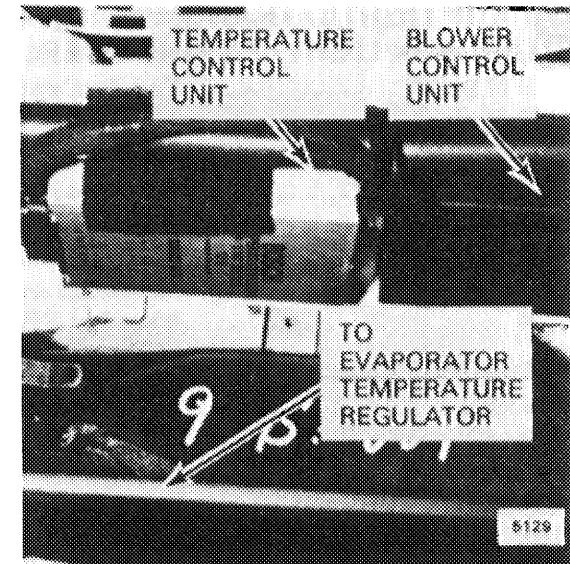


Figure 1 - Behind Glove Box (TD only)

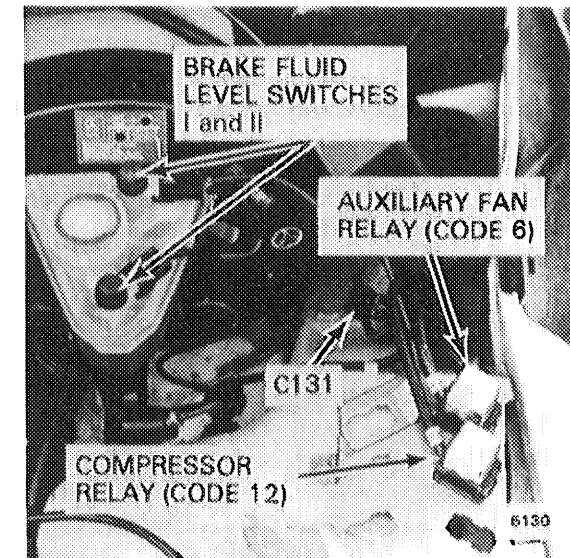


Figure 2 - Behind LH Front Wheel Well

COMPONENT LOCATIONS

BACKUP LIGHTS/TRANSMISSION KICKDOWN/ GLOVE BOX LIGHT/ENGINE OVERLOAD PROTECTION (continued)

| | Page-Figure |
|--|-------------|
| C138 (4 pins)..... To left of spare tire | 209-1 |
| C139 (4 pins)..... Ahead of RH rear light assembly | 207-2 |
| C153 (6 pins)..... LH front wheel well | |
| G102 | 210-2 |
| G103 | |
| (300 D/CD) | 203-2 |
| (300 TD) | 205-1 |
| G104 | 207-2 |

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

| | |
|---|---|
| Fuse Box | 100-1 |
| Hazard Warning Switch/ Flasher | On center console |
| C124 (1 pin)..... | Behind center console |
| G102 | 210-2 |
| G109 | In console, base of gear shift selector |

CHARGING SYSTEM

| | |
|------------------------|--|
| Alternator | Front of engine |
| Battery | RH rear of engine compartment |
| Fuse Box | 100-1 |
| Ignition Switch | 208-1 |
| Light Switch | Instrument panel, right of steering column |
| Starter Assembly | Instrument panel, left of steering column |
| G100 | Lower RH rear of engine |
| | RH front fender, ahead of battery |

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

| | |
|----------------------|---------------------------|
| Antenna Motor/Relay | |
| (300 D/CD) | 203-2 |
| (300 TD) | 209-1 |
| Antenna Switch | On upper console |
| Fuse Box | 100-1 |
| C135 (6 pins) | |
| (300 D/CD) | Behind LH rear wheel well |
| (300 TD) | 209-1 |
| C148 (2 pins)..... | Behind upper console |
| G102 | 210-2 |
| G103 | |
| (300 D/CD) | 203-2 |
| (300 TD) | 205-1 |

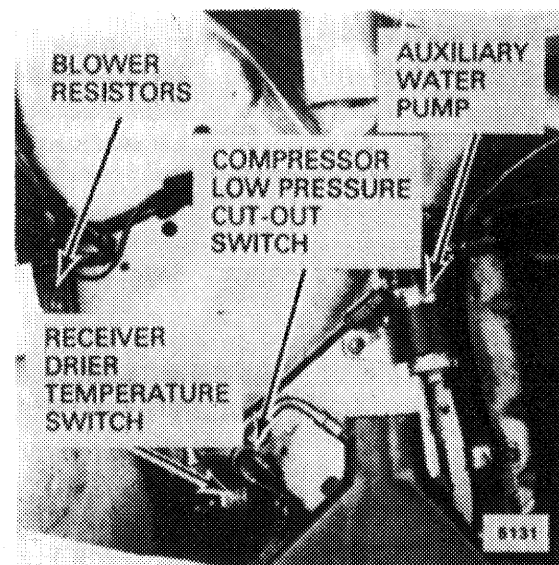


Figure 1 - Behind RH Headlights

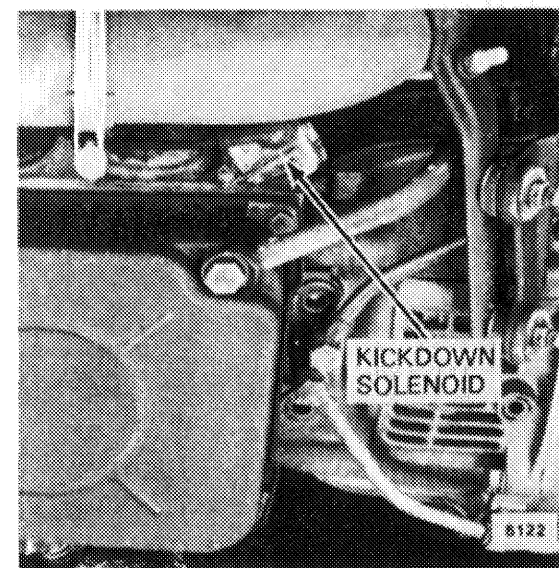


Figure 2 - RH Side of Transmission

202

300
D/CD/TD

COMPONENT LOCATIONS

COURTESY LIGHTS

| | Page-Figure |
|-----------------------------------|--|
| Door Switches | In each door jamb |
| Front Dome Light and Switch | Above rear view mirror assembly |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Rear Dome Light Switch | On upper console |
| Rear Wiper Motor | Lower middle of tailgate 203-1 |
| Tailgate Lock Switch | Inside lower middle area of tailgate 203-1 |
| Warning Module | To right of parking brake support 207-1 |
| C104 (14 pins) | Under LH side of instrument panel 207-1 |
| C136 (8 terminals) | Top center of tailgate frame 208-2 |
| G102 | Behind instrument cluster 210-2 |
| G103 | |
| (300 D/CD) | In trunk, behind LH wheel well 203-2 |
| (300 TD) | Above LH rear wheel well 205-1 |
| G104 | Ahead of RH rear light assembly 207-2 |

HEADLIGHTS/FOG LIGHTS

| | |
|--------------------------|--|
| Combination Switch | Upper LH side of steering column 204-2 |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Light Switch | Instrument panel, left of steering column |
| C106 (14 pins) | To left of brake pedal support 207-1 |
| C141 (4 pins) | Behind LH headlight assembly |
| C142 (4 pins) | Behind RH headlight assembly |
| G101 | RH front fender, behind headlights |
| G102 | Behind instrument cluster 210-2 |

HEATED SEATS

| | |
|----------------------------|--|
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Seat Heaters | In each seat cushion |
| Seat Heater Switches | On center console |
| G102 | Behind instrument cluster 210-2 |

HORNS/SLIDING ROOF

| | |
|---------------------------|--|
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Horn Switch | In steering wheel |
| Sliding Roof Motor | In trunk, above LH rear wheel well |
| Sliding Roof Switch | On upper console |
| Slip Rings | Behind center of steering wheel 204-2 |
| Washer Motor | At base of washer fluid reservoir |

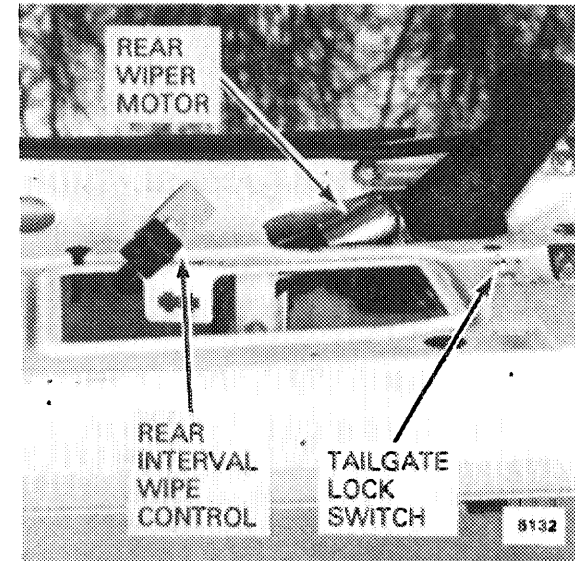


Figure 1 - Below Tailgate Window

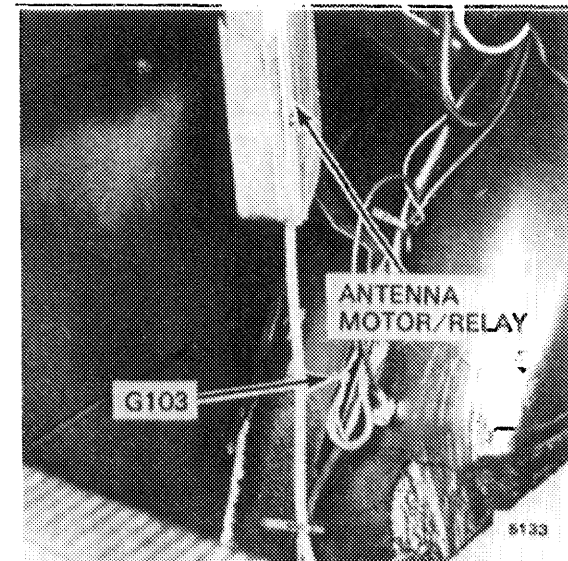


Figure 2 - Behind LH Rear Wheel Well (D/CD only)

COMPONENT LOCATIONS

HORNS/SLIDING ROOF (continued)

| | | |
|----------------|------------------------------------|-------|
| C106 (14 pins) | To left of brake pedal support | 207-1 |
| C141 (4 pins) | Behind LH headlight assembly | |
| G101 | RH front fender, behind headlights | |
| G102 | Behind instrument cluster | 210-2 |

LIGHTS: MARKER/LICENSE/TRUNK (300 D/CD)

| | | |
|----------------|--------------------------------------|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| C104 (14 pins) | Under left side of instrument panel | 207-1 |
| G103 | In trunk, behind LH wheel well | 203-2 |
| G104 | Ahead of RH rear light assembly | 207-2 |

204

300
D/CD/TD

LIGHTS: PARK/TAIL (300 D/CD)

| | | |
|----------------|--------------------------------------|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| C141 (4 pins) | Behind LH headlight assembly | |
| C142 (4 pins) | Behind RH headlight assembly | |
| G101 | RH front fender, behind headlights | |
| G102 | Behind instrument cluster | 210-2 |
| G103 | In trunk, behind LH wheel well | 203-2 |
| G104 | Ahead of RH rear light assembly | 207-2 |

LIGHTS: PARK/TAIL/LICENSE (300 TD)

| | | |
|--------------------|--------------------------------------|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Rear Wiper Motor | Inside lower middle area of tailgate | 203-1 |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| C136 (8 terminals) | Top center of tailgate frame | 208-2 |
| C138 (4 pins) | To left of spare tire | 209-1 |
| C139 (4 pins) | Ahead of RH rear light assembly | 207-2 |
| C141 (4 pins) | Behind LH headlight assembly | |
| C142 (4 pins) | Behind RH headlight assembly | |
| G101 | RH front fender, behind headlights | |
| G102 | Behind instrument cluster | 210-2 |
| G103 | Above LH rear wheel well | 205-1 |
| G104 | Ahead of RH rear light assembly | 207-2 |

POWER DISTRIBUTION

| | | |
|------------------|--|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Ignition Switch | Instrument panel, right of steering column | 208-1 |
| Starter Assembly | Lower RH rear of engine | |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| G100 | RH front fender, ahead of battery | |

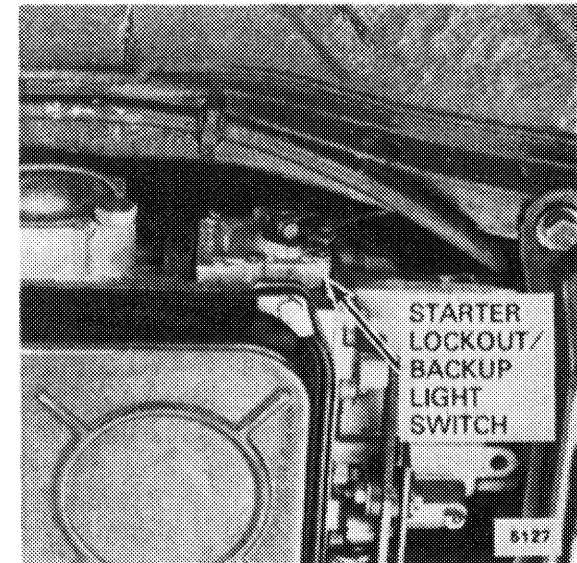


Figure 1 - LH Side of Transmission (D/CD only)

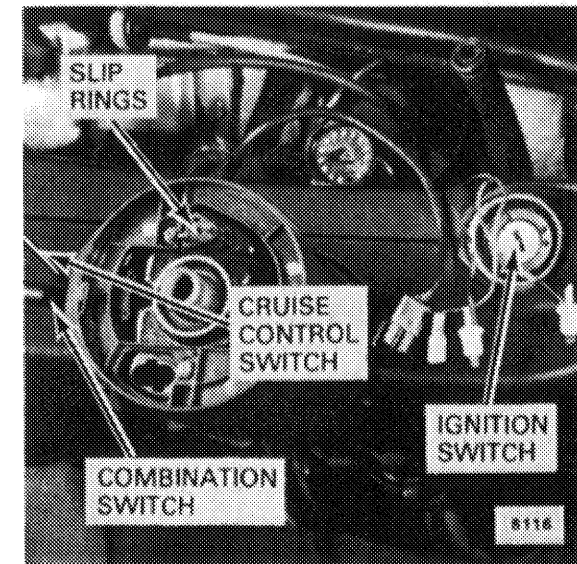


Figure 2 - Steering Column

COMPONENT LOCATIONS

POWER WINDOWS

| | | Page-Figure |
|----------------------------|--|-------------|
| Console Switch Group | On center console | |
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Rear Window Switches | Below each rear window | |
| Window Motors | Below each window | 209-2 |
| Window Relay | Behind instrument cluster | 205-2 |
| C107 (6 pins) | Under console | |
| C108 (2 pins) | Under console | |
| G102 | Behind instrument cluster | 210-2 |

PRE-GLOW SYSTEM

| | | |
|--|--|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Glow Plug Control Relay | Behind LH headlights | 206-2 |
| Ignition Switch | Instrument panel, right of steering column | 208-1 |
| Starter Assembly | Lower RH rear of engine | |
| Starter Lockout/Backup Light Switch | LH side of transmission | 204-1 |
| Washer Motor | Bottom of washer fluid reservoir | |
| C130 (6 pins) | Connected to glow plug control relay | |
| C137 (6 pins) | Connected to glow plug control relay | |
| C141 (4 pins) | Behind LH headlight assembly | |
| G100 | RH front fender, ahead of battery | |
| G102 | Behind middle of instrument cluster | 210-2 |

REAR DEFOGGER

| | | |
|------------------------------|--|-------|
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Rear Defogger Switch | On upper console | |
| Rear Defogger Timer Relay .. | Behind LH side of instrument cluster | 205-2 |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| C136 (8 terminals) | Top center of tailgate frame | 208-2 |
| G102 | Behind instrument cluster | 210-2 |
| G103 (300 D/CD) | In trunk, behind LH wheel well | 203-2 |
| (300 TD) | Above LH rear wheel well | 205-1 |
| G104 | Ahead of RH rear light assembly | 207-2 |

Page-Figure

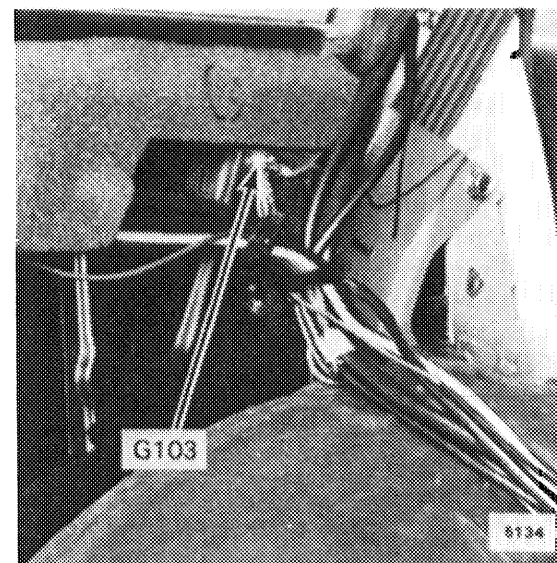


Figure 1 - Above LH Rear Wheel Well (TD only)

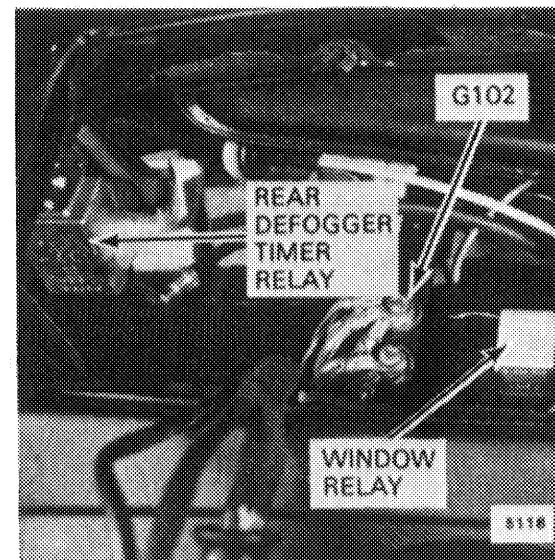


Figure 2 - Behind Instrument Cluster

COMPONENT LOCATIONS

REAR WIPER/WASHER

| | Page-Figure |
|----------------------------------|--|
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Rear Interval Wipe Control | In lower RH side of tailgate 203-1 |
| Rear Washer Motor | Behind fuel tank intake tube 207-2 |
| Rear Washer Switch | On upper console |
| Rear Wiper Motor | Inside lower middle of tailgate 203-1 |
| Rear Wiper Switch | On upper console |
| C136 (8 terminals) | Top center of tailgate frame 208-2 |
| C139 (4 pins)..... | Ahead of RH rear light assembly 207-2 |
| G103 | |
| (300 D/CD) | In trunk, behind LH wheel well 203-2 |
| (300 TD) | Above LH rear wheel well 205-1 |
| G104 | Ahead of RH rear light assembly 207-2 |

SEAT BACKREST LOCKING SYSTEM

| | |
|--------------------------|--|
| Door Switches | In each door jamb |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Switch-Over Valves | Under front seats |
| Warning Module | To right of parking brake support 207-1 |
| C160 (1 pin)..... | In RH door of coupe |
| C161 (1 pin)..... | In RH door of coupe |
| G102 | Behind instrument cluster 210-2 |

START/STOP (IGNITION SWITCH)

| | |
|------------------------------|---|
| Fuel Shutoff Diaphragm | Rear of fuel injection pump 206-1 |
| Ignition Switch | Instrument panel, right of steering column 208-1 |
| Starter Assembly | Lower RH rear of engine |
| Starter Lockout/Backup | |
| Light Switch..... | LH side of transmission 204-1 |
| G100 | RH front fender, ahead of battery |
| G102 | Behind instrument cluster 210-2 |

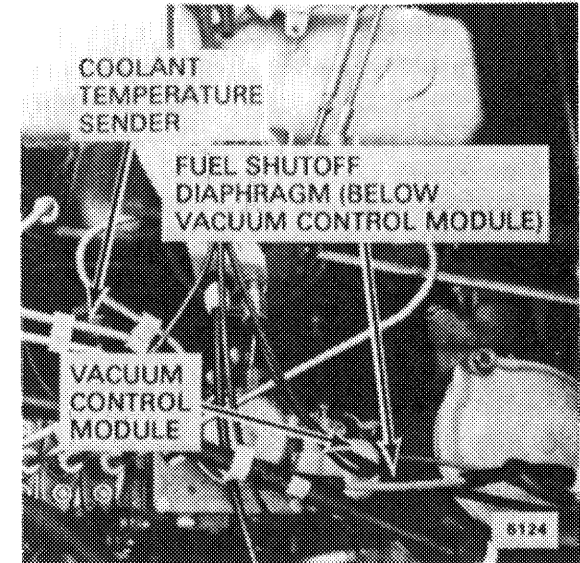


Figure 1 - LH Rear of Engine

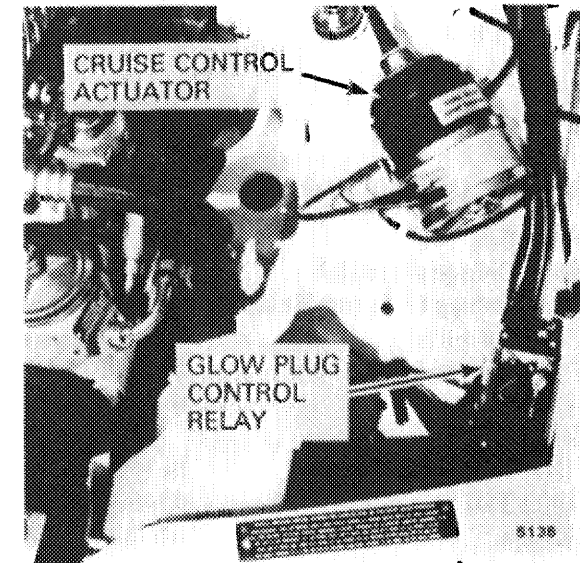


Figure 2 - LH Front Wheel Well (300 D, CD only)

COMPONENT LOCATIONS

STOPLIGHTS/CRUISE CONTROL

| | | Page-Figure |
|--------------------------|--------------------------------------|-------------|
| Brake Switch | Top of brake pedal support | |
| Cruise Control Actuator | | |
| (300 D/CD) | On LH front wheel well | 206-2 |
| (300 TD) | LH front of engine | 210-5 |
| Cruise Control Amplifier | To right of parking brake support | 207-1 |
| Cruise Control Switch | Upper LH side of steering column | 204-2 |
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Vehicle Speed Sensor | Mounted on rear of speedometer | 209-5 |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| C140 (6 pins) | To left of brake pedal support | 207-1 |
| C151 (15 pins, round) | On rear of instrument cluster | 209-4 |
| C152 (4 pins, TD only) | On rear of instrument cluster | 209-4 |
| C164 (8 pins) | On LH front wheel well | |
| G102 | Behind instrument cluster | 210-2 |
| G103 | | |
| (300 D/CD) | In trunk, behind LH wheel well | 203-2 |
| (300 TD) | Above LH rear wheel well | 205-1 |
| G104 | Ahead of RH rear light assembly | 207-2 |

TURN SIGNAL/HAZARD LIGHTS

| | | |
|-----------------------------------|--------------------------------------|-------|
| Combination Switch | Upper LH side of steering column | 204-2 |
| Fuse Box | LH rear corner of engine compartment | 100-1 |
| Hazard Warning Switch/ Flasher | On center console | |
| C104 (14 pins) | Under LH side of instrument panel | 207-1 |
| C106 (14 pins) | To left of brake pedal support | 207-1 |
| C138 (4 pins) | To left of spare tire | 209-1 |
| C139 (4 pins) | Ahead of RH rear light assembly | 207-2 |
| C141 (4 pins) | Behind LH headlight assembly | |
| C142 (4 pins) | Behind RH headlight assembly | |
| G101 | RH front fender, behind headlights | |
| G102 | Behind instrument cluster | 210-2 |
| G103 | | |
| (300 D/CD) | In trunk, behind LH wheel well | 203-2 |
| (300 TD) | Above LH rear wheel well | 205-1 |
| G104 | Ahead of RH rear light assembly | 207-2 |

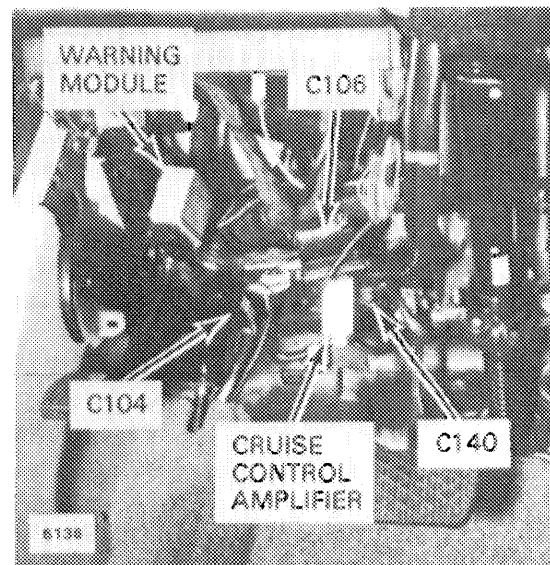


Figure 1 - Above Driver's Footwell

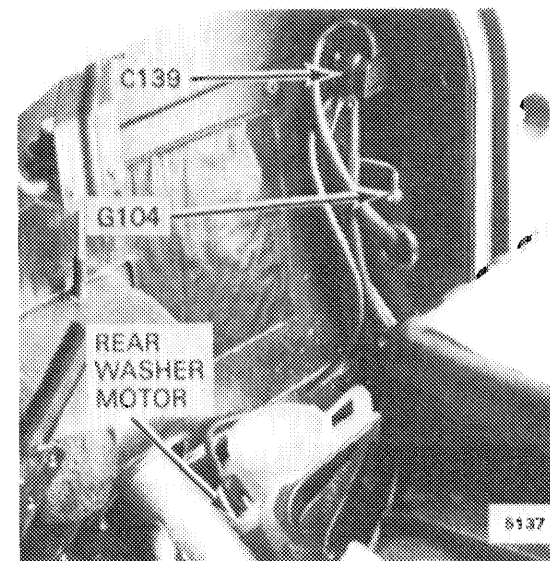


Figure 2 - In Front of RH Rear Lights
(TD only)

COMPONENT LOCATIONS

WARNING INDICATORS/GAUGES/CLOCK/ INSTRUMENT CLUSTER ILLUMINATION

| | Page-Figure |
|--|--|
| Brake Wear Sensors | In each front brake pad |
| Coolant Temperature Sender | Top LH front part of engine 206-1 |
| Fuel Gauge Sender | Under first aid kit tray |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Impulse Transmitter (TD only) | LH rear of transmission 210-1 |
| C104 (14 pins) | Under LH side of instrument panel 207-1 |
| C131 (2 pins)..... | Behind LH front wheel well, below fuse box ... 201-2 |
| C132 (2 pins)..... | Behind RH front wheel well, at battery |
| C146 (6 pins, TD only) | RH side of driver's footwell |
| G101 | RH front fender, behind headlights |
| G102 | Behind instrument cluster 210-2 |
| G103 (300 D/CD) | In trunk, behind LH wheel well 203-2 |
| (300 TD) | Above LH rear wheel well 205-1 |

WARNING SYSTEM

| | |
|-------------------------------------|--|
| Brake Fluid Level Switches | Brake fluid reservoir 201-2 |
| Door Switches | In each door jamb |
| Driver's Seatbelt Switch | Part of driver's seatbelt assembly |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Key Warning Switch | Part of ignition switch 208-1 |
| Parking Brake Switch | On parking brake support |
| Warning Module | To right of parking brake support 207-1 |
| C104 (14 pins) | Under LH side of instrument panel 207-1 |
| C131 (2 pins)..... | Behind LH front wheel well, below fuse box ... 201-2 |
| C160 (1 pin)..... | In RH door of coupe |
| C166 (2 pins)..... | Under driver's seat |
| G102 | Behind instrument cluster 210-2 |

WIPER/WASHER

| | |
|----------------------------|---|
| Combination Switch | Upper LH side of steering column 204-2 |
| Fuse Box | LH rear corner of engine compartment 100-1 |
| Interval Wipe Control..... | Behind LH side of instrument cluster 209-4 |
| Washer Motor | Bottom of washer fluid reservoir |
| Wiper Motor | In center of fresh air duct |
| C106 (14 pins) | To left of brake pedal support 207-1 |
| C112 (6 pins)..... | To upper right of power brake booster 209-6 |
| C141 (4 pins)..... | Behind LH headlight assembly |
| G102 | Behind instrument cluster 210-2 |

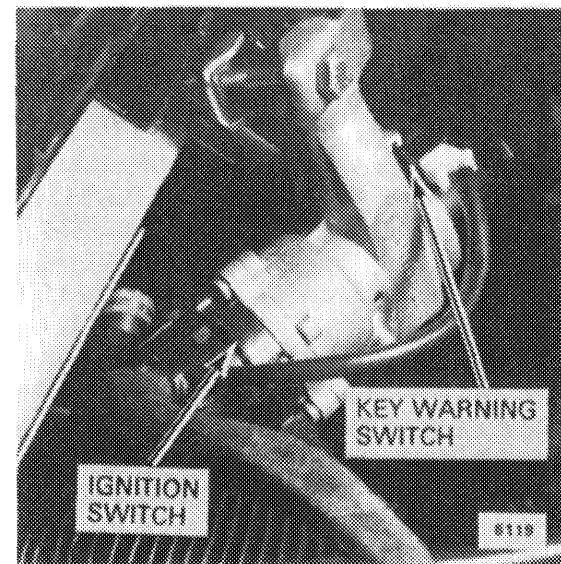


Figure 1 - Ignition Switch (As Seen From Below)

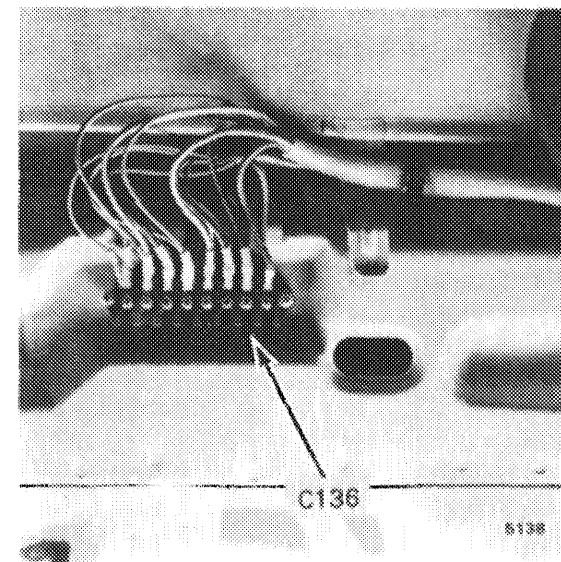


Figure 2 - Top of Tailgate Frame

COMPONENT LOCATIONS

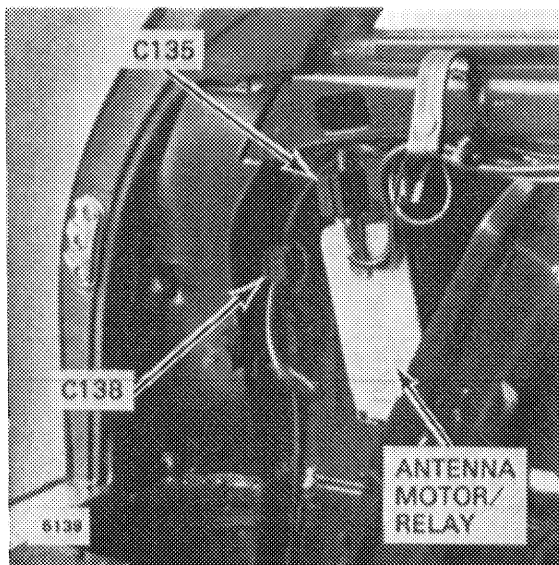


Figure 1 - Spare Tire Well (TD only)

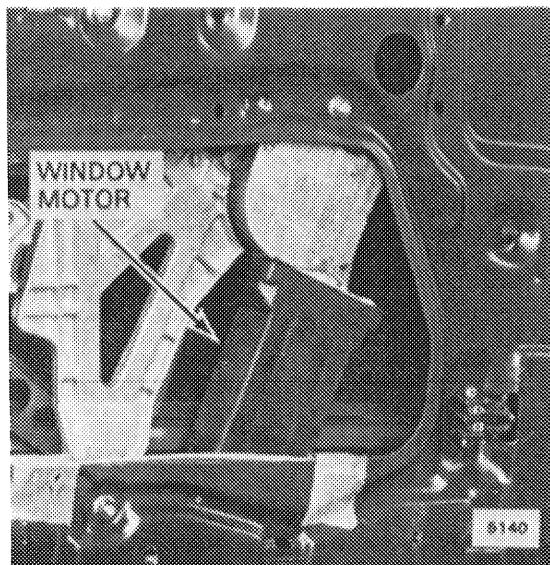


Figure 2 - Inside Driver's Door

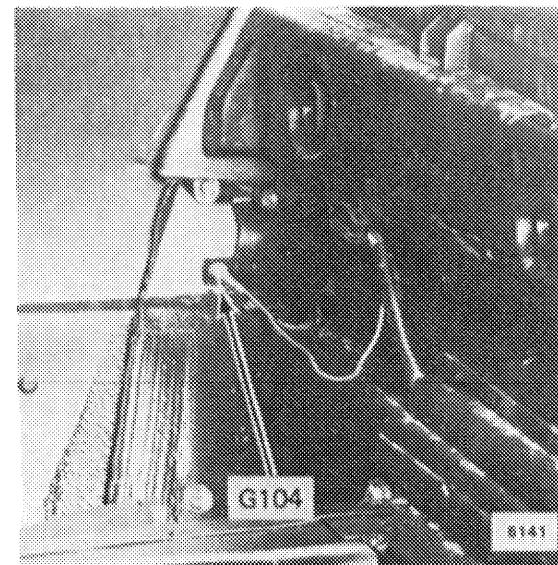


Figure 3 - In Front of RH Rear Lights (D/CD only)

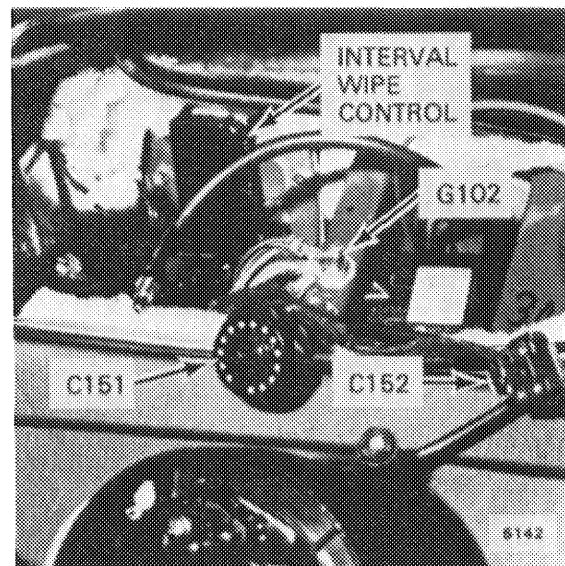


Figure 4 - Behind Instrument Cluster

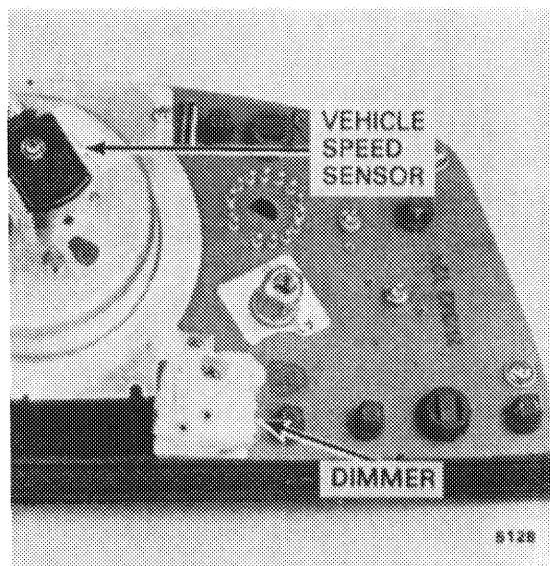


Figure 5 - Back of Instrument Cluster (D/CD only)

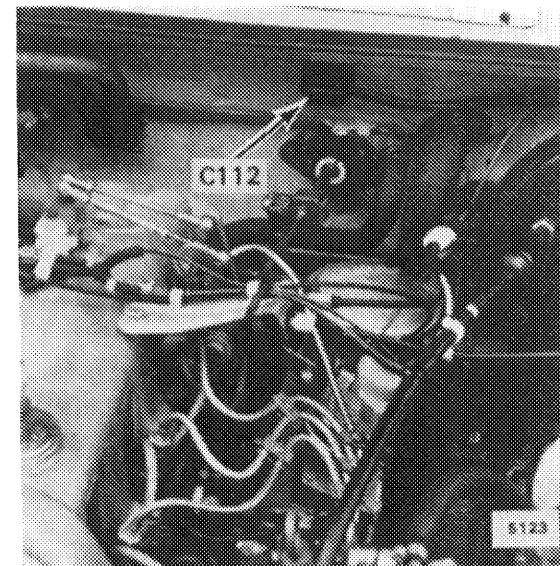


Figure 6 - Right of Power Brake Booster

COMPONENT LOCATIONS

210
300
D/CD/TD

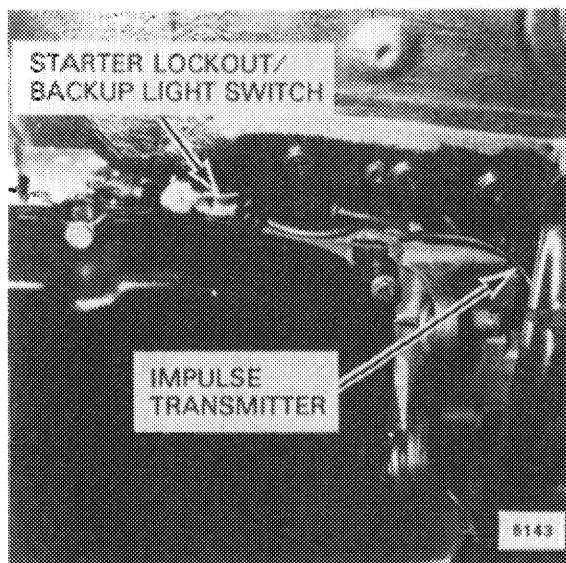


Figure 1 - LH Rear of Transmission (TD only)

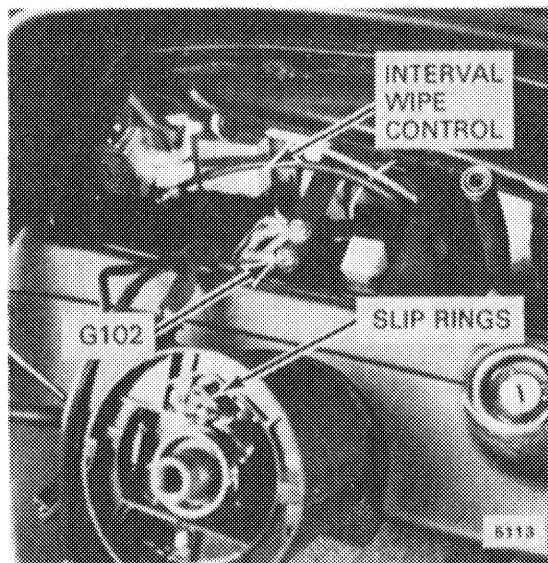


Figure 2 - Behind Instrument Cluster (D/CD only)

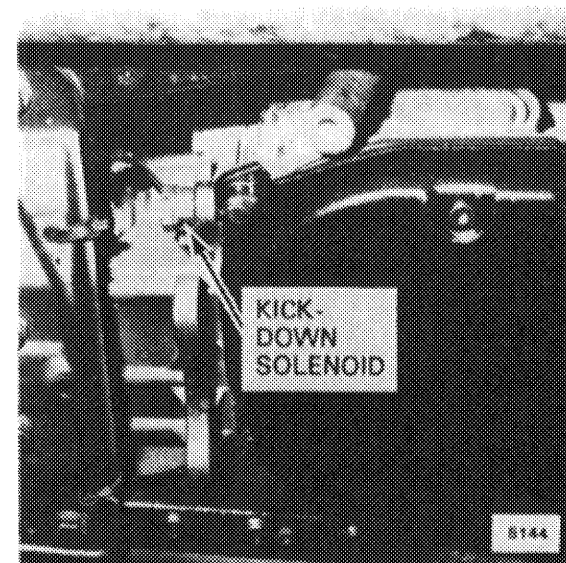


Figure 3 - RH Rear of Transmission (TD only)

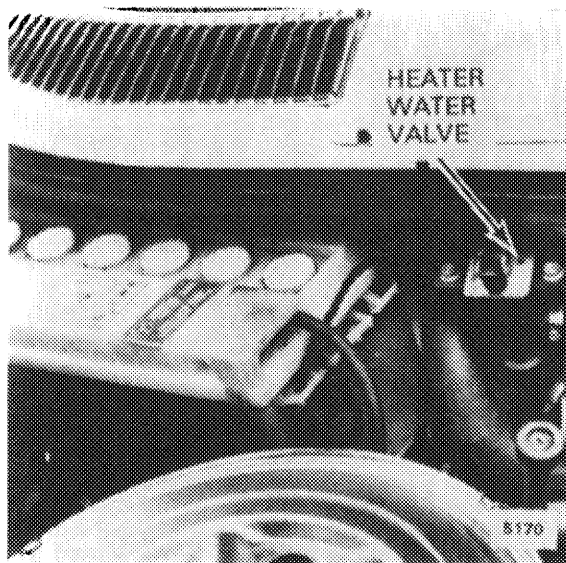


Figure 4 - RH Rear Corner of Engine Compartment

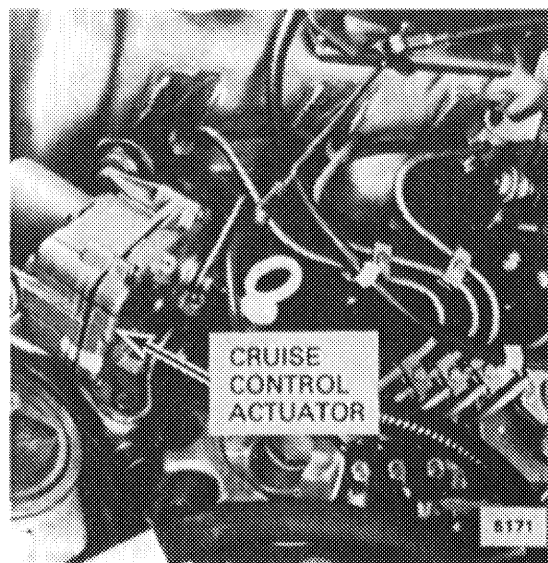


Figure 5 - LH Front of Engine (TD only)