


**Removal**

---

- 1 Remove instrument cluster (54-250).
- 2 Loosen fastening screws (2) on tachometer. Pull out potentiometer (9) and plug-in clips (3) for electric line. Remove tachometer (4).


**Mechanical tachometer**

- 1 Light, revolution counter and tachometer
- 2 Fastening screws
- 3 Plug-in clips
- 4 Tachometer
- 5 Light, tachometer and indicating instrument
- 6 Warning lamp tank readout
- 7 Indicator lamp turnsignal (flasher) left
- 8 Indicator lamp brake
- 9 Potentiometer
- 10 Indicator lamp battery charge
- 11 Indicator lamp high beam
- 12 Indicator lamp turnsignal (flasher) right

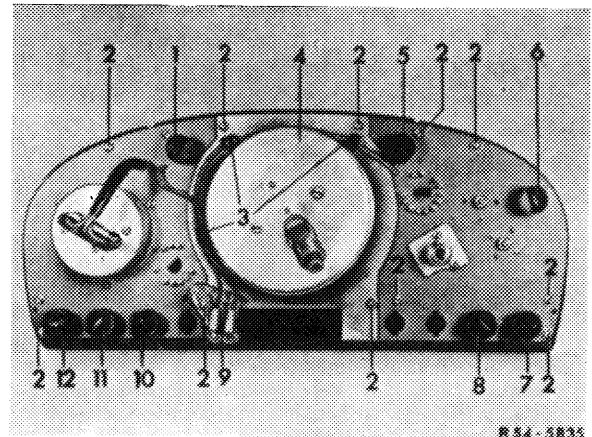

**Electronic tachometer**

- 1 Revolution counter
- 2 Fastening screws
- 3 Plug-in clips
- 4 Tachometer
- 9 Potentiometer

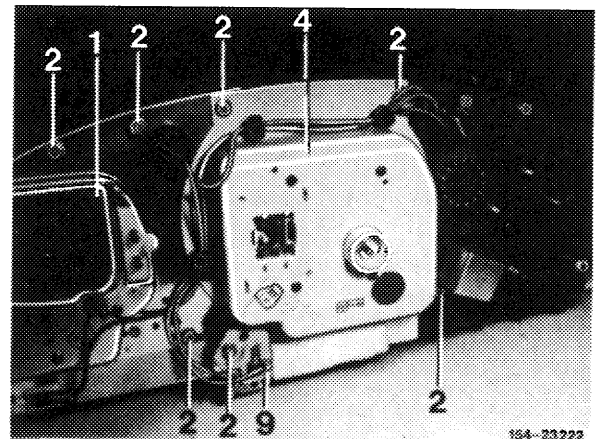

**Installation**

---

- 3 For installation proceed vice versa.