

F. Engines 116 and 117

- 1 Disconnect connecting rod (21) on actuator.
- 2 Push lever of actuator clockwise to idle.
- 3 Turn ball head of connecting rod (21) in such a manner that it is approx. 1 mm longer.
- 4 Attach connecting rod (21) and counterlock ball head.

