

## 83–645 Removal and installation of ambient temperature sensor

---

### Data

---

Resistance at 20 °C (68 °F)  
ambient temperature

nominal 363 ohms  
max. 388 ohms  
min. 337 ohms


---

### Removal

---

- 1 Pull off electric plug (62) while paying attention to safety hooks.
- 2 Unscrew two screws (63) and pull ambient temperature sensor (8) out of front wall.

8 Ambient temperature sensor  
62 Electric plug  
63 Screw

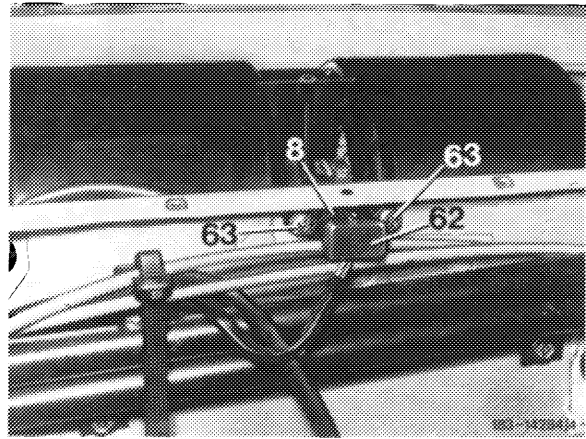


### Installation

---

- 3 Test ambient temperature sensor (8) with ohmmeter (83–609).
- 4 Attach ambient temperature sensor (8) with screws (63) to front wall and plug-in electric plug (62).

8 Ambient temperature sensor

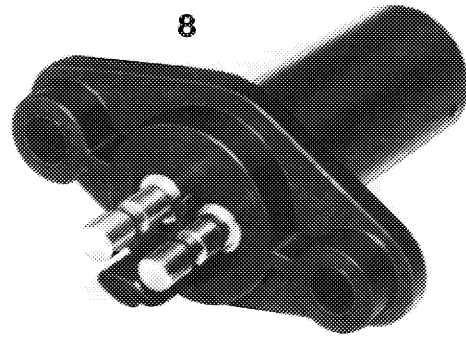

183 - 11994