


## 83–680 Removal and installation of double contact relay

---

### Removal

---

- 1 Remove glove box (68–140).
- 2 Unscrew double contact relay (18) from holder on front wall and pull off electric plug.

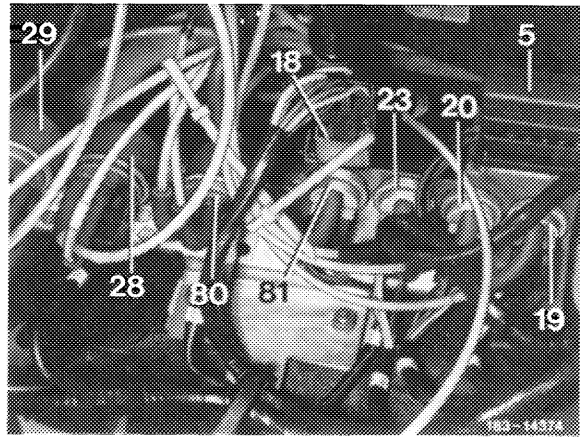

### Installation

---

- 3 Mount electric plug to double contact relay (18) and screw relay to holder.
- 4 Install glove box (68–140).