


Removal

- 1 Drain coolant.
- 2 Remove battery.
- 3 Loosen hose clamps (53) and pull off heating water hoses.
- 4 Pull 2-pole coupler from monovalve (11).
- 5 Unscrew screws (54) and take monovalve (11) from holder.

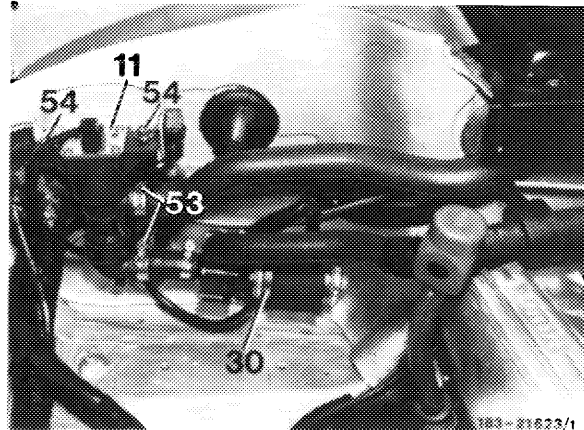

Installation

- 6 Prior to installation of monovalve, check grommets between monovalve and holder for damage and renew, if required.
- 7 For installation proceed vice versa.
- 8 Fill-in coolant and check cooling system for leaks.
- 9 Check automatic climate control for function.