

- A. Removing control unit
- 1 Remove ashtray with holder.
- 2 Pull out wooden panelling with control unit in forward direction and pull 4 bulb sockets as well as the two 12-pole couplers from control unit.

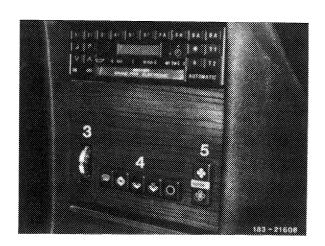


3 Unscrew both screws at the left and right (arrow) and remove control unit from wooden panelling.

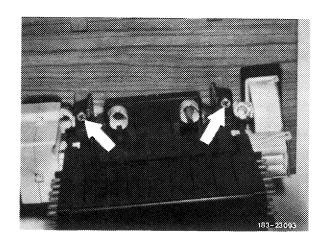

B. Removing and installing temperature dial

Removing


1 Push out clip (63) and the one underneath, pull temperature dial (3) from control unit.

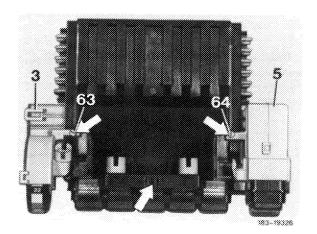

C. Removing and installing blower switch


Removing

- 1 Remove plastic cover (refer to arrow) from control unit, starting at blower switch (5), so that pushbuttons are falling out individually. Push out clip (64).
- 2 Unclip blower switch (5) from control unit and pull off.

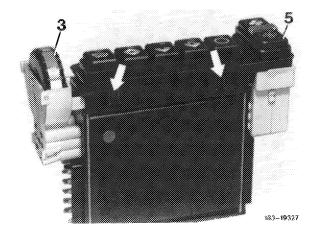


Installing

3 Press blower switch (5) with clip (64) against control unit, mount plastic cover. Put back pushbuttons under slight pressure with a rotating motion (pay attention to sequence and position of symbols).

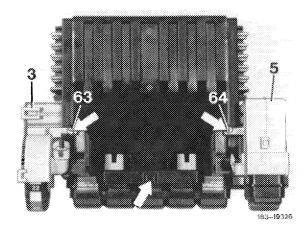

D. Installing control unit

1 Insert control unit into wooden panelling and mount by means of two screws (arrow).

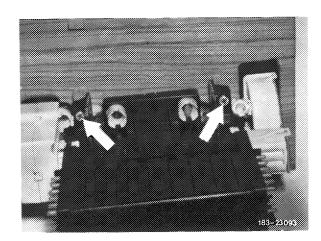

- 2 Plug 12-pole couplers left and right, as well as 4 bulb sockets to control unit.
- 3 Insert wooden panelling with control unit into center console.
- 4 Install holder with ashtray.

