

The coolant pump cannot be reconditioned. After pressing out coolant pump shaft with compact bearing, the tight fit of the new compact bearing in the light alloy housing of the coolant pump is no longer assured.

In the event of leaks on the coolant pump, the sliding ring seal and the counter-ring with sealing ring can be replaced after pulling off the impeller (20–225).