

## 09–410 Renewing intake pipe (intake pipe removed)

---

### Renewing

---

- 1 Remove and install intake pipe (09–400).
- 2 Remove and install throttle valve housing (07.4–230).
- 3 Unscrew all unscrewable parts on removed intake pipe and mount on new intake pipe using new seals and gaskets.