


14–250 Removal and installation of air pump

California version model year 1974

Removal

- 1 Compress hose clip on contoured hose of air pump with combination pliers and push toward the rear for approx. 2 cm.
- 2 Loosen clamping screws (1 and 2) as well as fastening screw (3) and unscrew.
- 3 Remove V-belt and contoured hose, remove air pump.

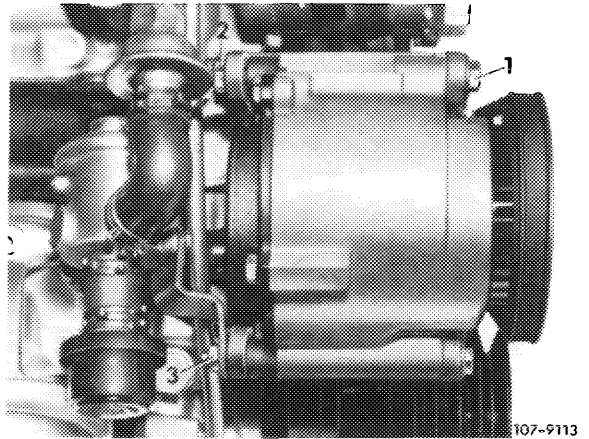

Installation

- 4 For installation proceed vice versa.

Note: The V-belt is correctly tensioned if it can be resiliently pushed down under energetic thumb pressure.