
At the first and second maintenance jobs, then every 15 000 km / 10 000 miles


All types with manual transmission

- Check the master and slave cylinders for leaks (visual inspection).
- Check pipes and hoses for leaks, misrouting, chafing, dents, chracks and corrosion.

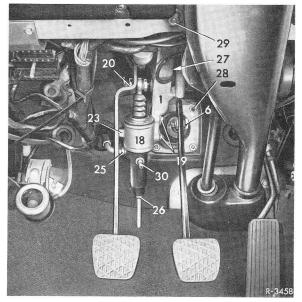


18 Master cylinder 25 Supply line

26 Pressure line

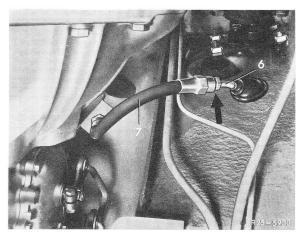

6 Pressure line

7 Pressure hose

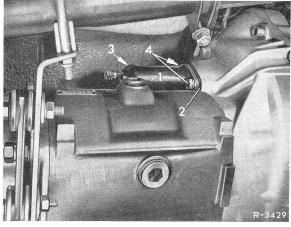

1 Slave cylinder

3 Pressure line connection