

At the second maintenance job,
then every 15 000 km / 10 000 miles


All types except type 100 and 116

Type of Grease

High pressure grease

see: Operative Materials Page 266

- Grease guide on the frame floor. Then operate the parking brake several times, so that the grease is distributed throughout the guide.

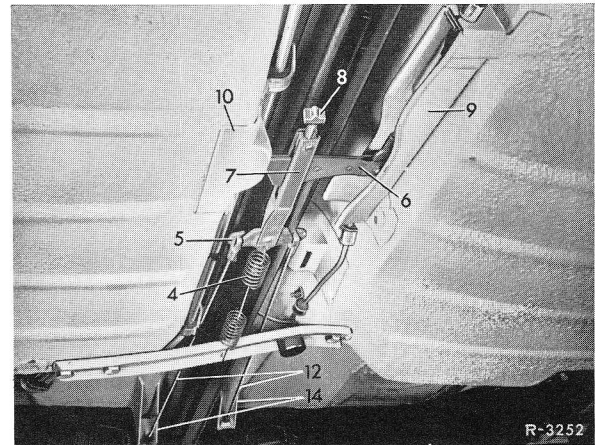

9 Guide on frame floor