Clean throttle valve 766

Every 15 000 km (10 000 miles)

USA-version

Model year 1974 Engine M 117 California Emission Control System

- Remove air filter.
- Soak a rag with cleaning fluid.
- Clean deposits on inside of throttle valve housing. Any sticking deposits should be removed with a non-metallic scraper (for instance wood).
- Blow out vacuum connections on throttle valve housing with compressed air.

Make sure throttle valve moves freely.

