

All carburetor engines exept M 110

Every 45 000 km / 30 000 miles

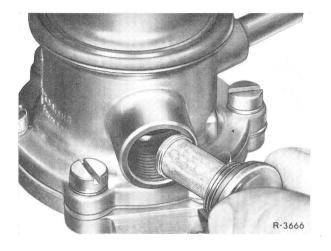

Lever type pump

- Take out fuel strainer and clean.
- Install plug using new gasket.
- Check sealing.

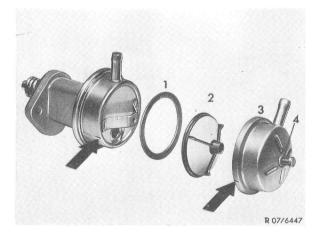

Plunger type pump

• Remove cover (3).

• Renew fuel strainer (2), rubber gasket (1), aluminum seal (4), and cylindrical head screw. The parts are available as a repair kit.

• Check sealing.