



Types 100 109

At the first maintenance job

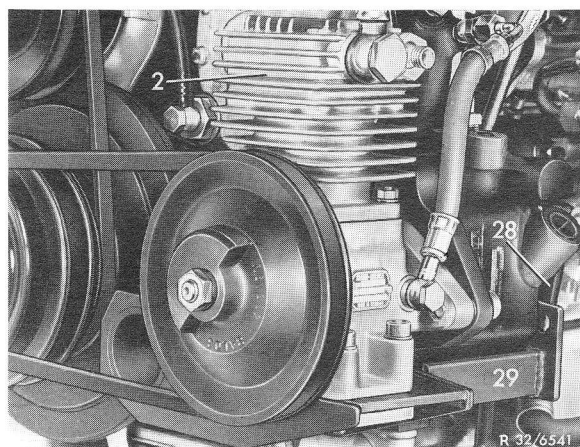


- Check fixing bolts for air compressor and air compressor support on the engine for a tight fit and retighten if required.

Type 109.016

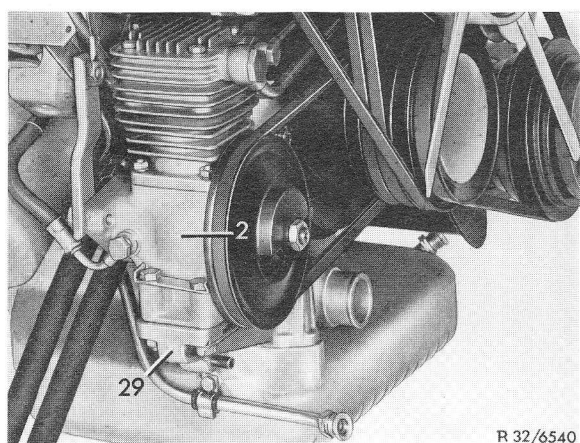

Type 109.056 109.057

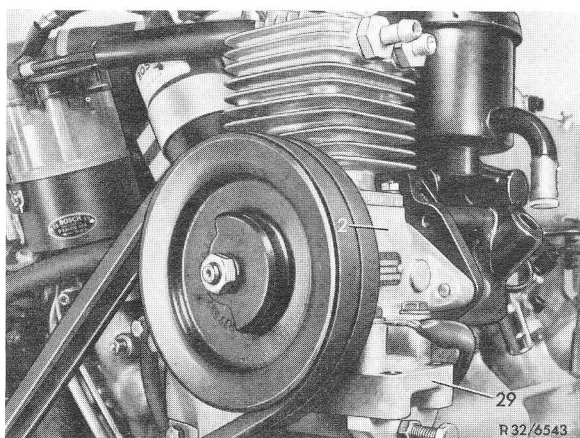

Type 109.018, 100

2 Air compressor
28 Strut

29 Support