

## Removal

- 1 Fold top back.
- 2 Remove two screws (1) each on bearing for top frame left and right.
- 3 Remove top.

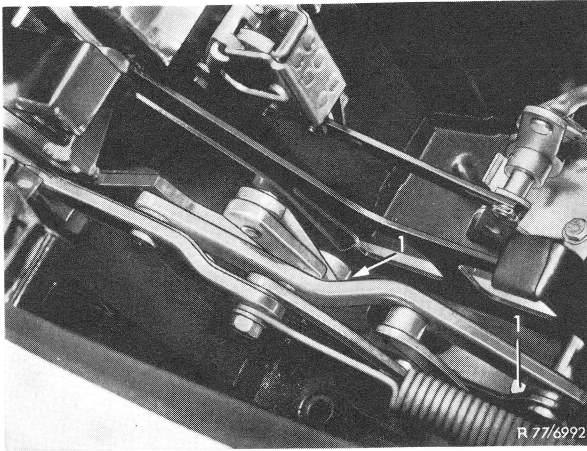


Figure 1

- 1 Screws on top frame

## Installation

- 4 For installation proceed vice versa.

**Note:** The shims serve the purpose of aligning the top in relation to the body. Add enough shims on both sides so that the top will close perfectly at front and rear and does not bind. The top frame in range of rear sealing rail of side windows should be vertical.