


Types 100 107 114 115 116

Every 15 000 km/ 10 000 miles

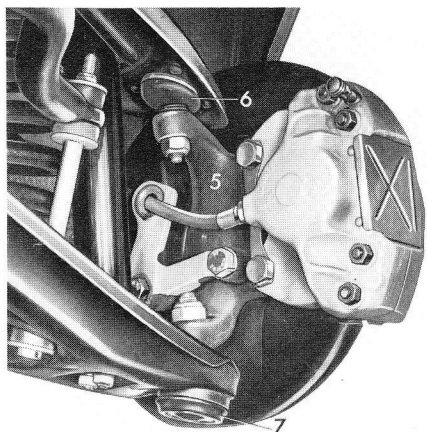


R 33-5609/1

- Carefully check sealing and condition of rubber boots for follower joints (6) and load carrying joints (7) of steering knuckle mounting.

**Note:** If rubber boot is leaky the corresponding joint and/or wishborne arm must be renewed immediately since any dirt that penetrates will cause irreparable damage. The renewal of a rubber boot is permissible only if it is certain that no dirt has got into the inside of the joint.


Types 107, 114, 115

- 5 Steering knuckle
- 6 Follower joint
- 7 Carrier joint

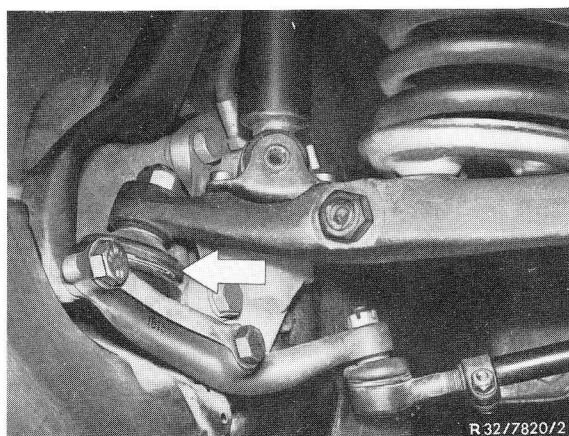

R 32/7820/2

Type 116 Carrier joint

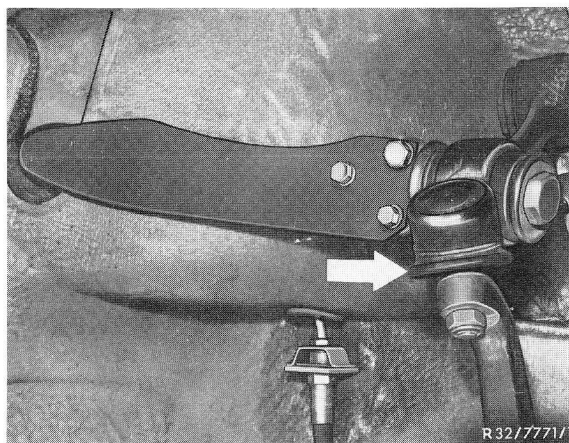

R 32/7771/1

Type 116 Follower joint