

Every 15 000 km/10 000 miles

All types with manual transmission

Type of oil


Automatic transmission fluid
approved oils

Type A, Suffix A
see: Operative Materials

Page 236.1, 236.2

Special tools

 Pin spanner SW 14 x 17 mm
Insert for pin spanner



000 589 24 07 00
000 589 24 07 01

Screw driver insert SW 14 1/2"



e. g. Hazet 985-14

- Unscrew closing plug of oil filler hole (upper arrow in illustration).
- The oil level is in order, if a negligible amount of oil emerges or if the oil level is at the lower edge of the opening.
If not, add oil.
- In the event of major oil losses, determine cause and repair.

