

At the second maintenance job,
then every 15 000 km / 10 000 miles

Types 107 114 115 116

Types of fluid and quantities

Type of fluid	Hydraulic see: Operation Materials Page 343		
Total contents of system	liters	approx. 3.3	
Contents of fluid reservoir up to markings on dipstick	max.	liters	approx. 2.6
	min.	liters	approx. 2.0


Special tools

Filter funnel	111 589 04 63 00
---------------	------------------

Note


Check fluid level with engine stationary and with vehicle on ground **ready for driving**.

- Remove cover with dipstick from fluid reservoir. After wiping, replace then remove and read off fluid level.

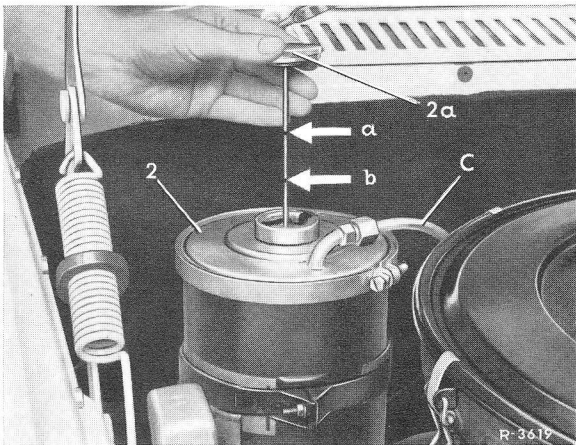

2 Fluid reservoir
2a Cover and dipstick
a Max. marking
b Min. marking
C Return flow line from level control unit to fluid reservoir

- When filling with fluid use filter funnel.

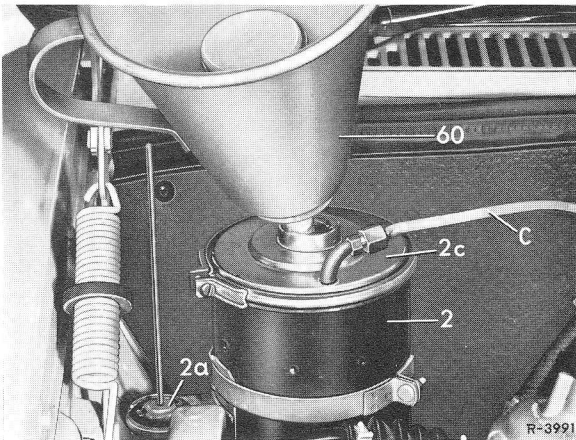

2 Fluid reservoir
2a Dipstick
2c Cover with filter element
60 Filter funnel
C Return flow line from level control unit to fluid reservoir