

At the first and second maintenance jobs

All types with manual transmission

Type of oil

Automatic transmission fluid
approved oils

Type A, Suffix A
see: Operative Materials


Page 236.1, 236.2

Quantity (lits.)

Type	4-speed transmission	5-speed transmission
107	1.8	—
108, 109, 111 (as from May 1969)		2.5
108, 109, 111 (up to May 1969) 113	1.4	1.1 (only 109 and 113)
114	1.6	2.5
115		—
116.020, 116.024		2.5
116.028	1.8	—

Special Tools

 Pin spanner SW 14 x 17 mm
Insert for pin spanner





000 589 24 07 00
000 589 24 07 01

Screw driver insert SW 14 1/2"



commercially available e. g. Hazet 985-14

- Only drain oil with the transmission warm, removing both closing plugs.
- Fill with oil until it overflows at the filler opening, (upper arrow).
- Check for leaks with the transmission warm.

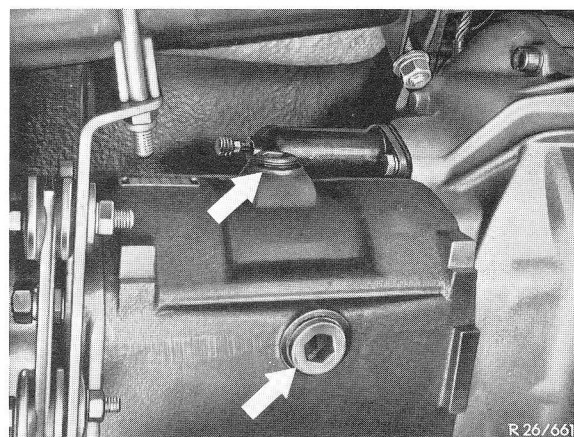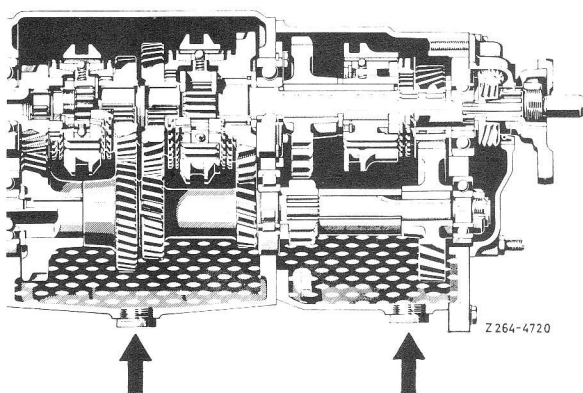

Take care! In the case of MB 5-speed transmission, **both** lower drain plugs must be removed when draining old oil, otherwise a large quantity of old oil will be left in the transmission (see adjacent drawing).