


Diesel Engine OM 615, 616
and gasoline engines special version
with oil bath air filter

Every 15 000 km / 10 000 miles

Note

Check oil level and amount of dirt in oil-bath air filter every 5 000 km (3 000 miles). Clean filter if necessary. In severe dust conditions overhaul filter at **more frequent** intervals.

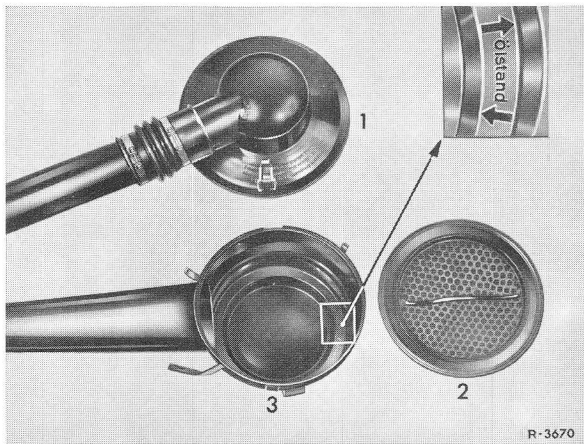

- Remove complete air filter for cleaning.
- Clean upper and lower parts of air filter.
- Clean filter element with diesel oil or petroleum and blow out with compressed air.

Caution! When cleaning air filter element do not use cotton waste, water, lyes or fluids containing acids.

- Before refitting filter **re-fill with fresh oil** up to upper mark. To do this hold air filter horizontal.