

At the first and second maintenance jobs,
then every 7 500 km / 5 000 miles

Types 108 109 111 113

Lubricant

High pressure grease

Note

In difficult road conditions or in continual short distance operations, grease front and rear axle at more frequent intervals!

Clean grease nipples before greasing!


Total number of grease nipples:

Types 108, 111, 113	= 16
---------------------	------


Type 109	= 18
----------	------

Front axle — grease nipples:


- Steering knuckle = 3 each
- Upper wishbone = 2 each
- Lower wishbone = 2 each

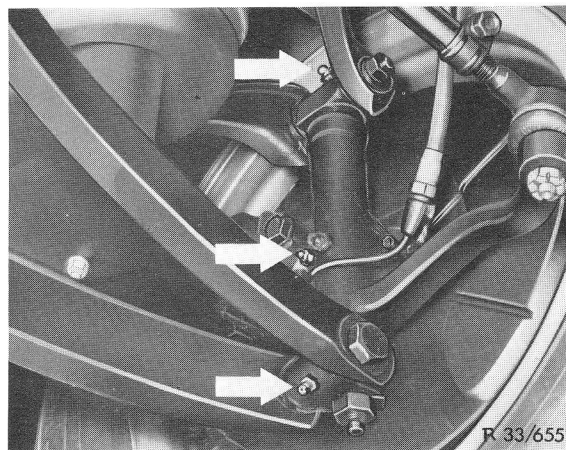


Steering knuckle

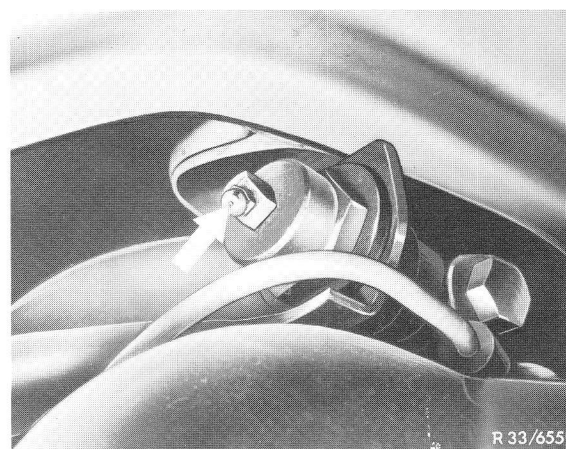


Upper wishbone front

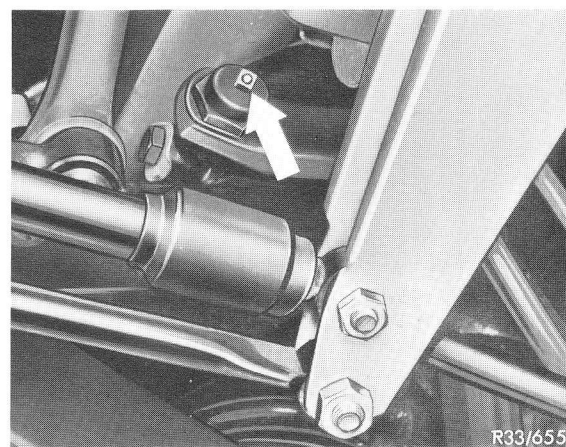

Upper wishbone rear

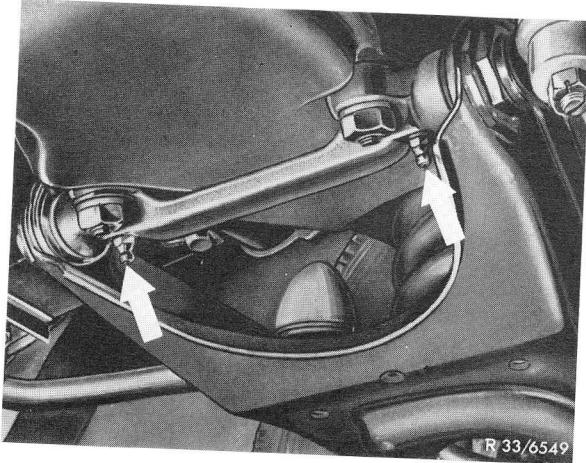


Lower wishbone

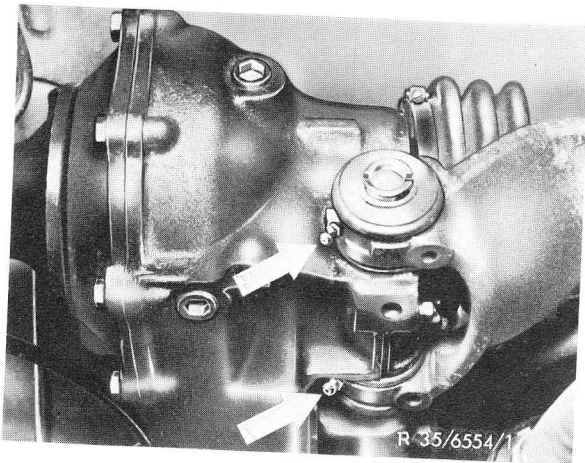

Axle tube seat, right

Rear axle — grease nipples:

- Rear axle tube seat (right) = 2

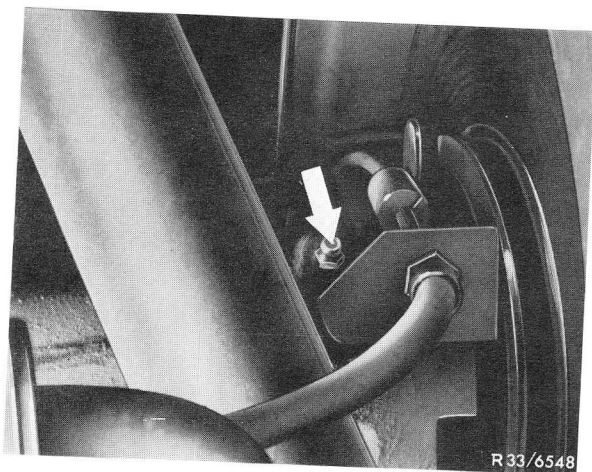

Anti-dive mounting on axle tubes

- On the type 109 there is one additional grease nipple on the anti-dive mounting on the axle tube, left and right.