


## Renew cover with filter element in the fluid reservoir of the air suspension system

670

Every 45 000 km / 30 000 miles


Typ 107 114 115 116

- Remove cover with dipstick from fluid reservoir. Disconnect return flow line (C) and release tensioning clamp (2b) and take out cover with filter element.

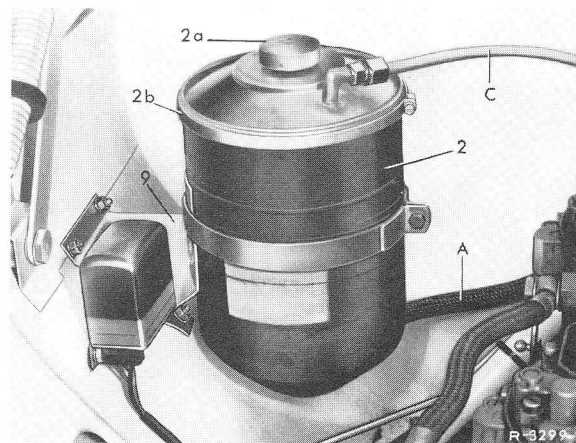

- 2 Fluid reservoir
- 2a Cover with dipstick
- 2b Tensioning clamp for cover with filter element
- C Return flow line from level control unit to fluid reservoir

- Fit new cover with filter element, observing correct seat of rubber sealing ring (2e).
- Check fluid level and top up if necessary (see item 138).

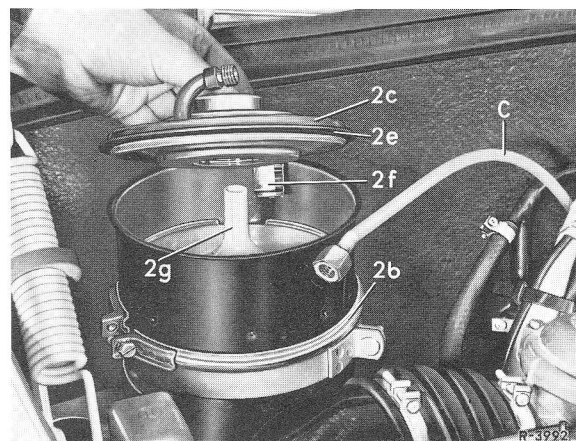

- 2b Tensioning clamp
- 2c Cover with filter element
- 2e Rubber sealing ring
- 2f By-pass valve
- 2g Air vent
- C Return flow line from level control unit to fluid reservoir