


Diesel-Engine OM 615, 616

At the second maintenance job,  
then every 15 000 km / 10 000 miles.

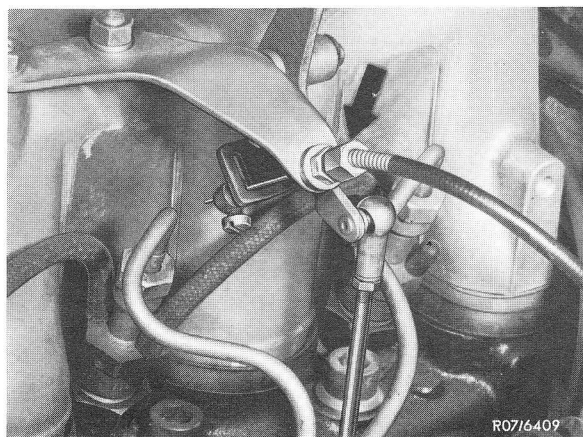

- Turn the knob on the instrument panel fully to the right. Then turn the knob back to the left; there should only be about 1/2 a revolution of free travel until an increase in idle speed is produced. Adjust with adjustment screw (arrow) if required.