


Engines M 114, 130

Every 15 000 km / 10 000 miles

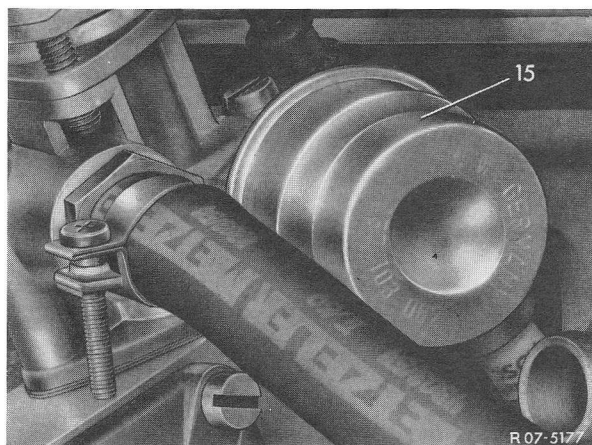

**Attention!** Do not clean auxiliary air filter, but replace.

- Before installing the new auxiliary air filter, check with the engine running at operating temperature, that the auxiliary air of the warm-up device has closed down.