


Every 45 000 km / 30 000 miles

Diesel engine OM 615, 616

- With the fuel prefilter (1) in position visually check for dirt contamination. If necessary replace.
- When replacing, the hex.-hd. with the inscription "Austritt" (Exit) must be installed in direction of flow to the feed pump.

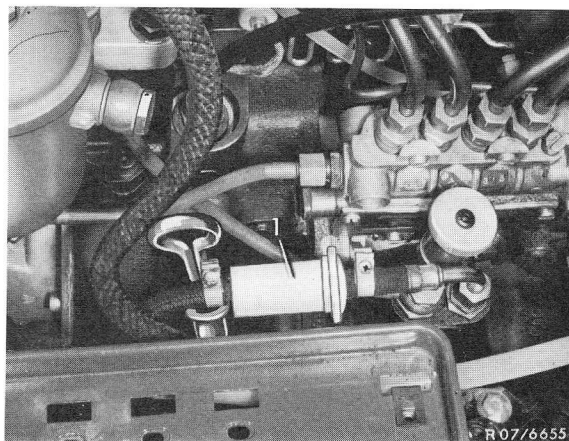

1 Prefilter