


Engine OM 616, 616

Every 45,000 km/30,000 miles

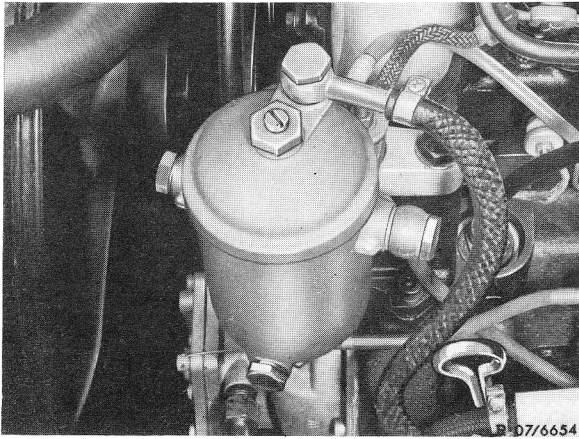

- Drain fuel in filter housing
- Remove filter element and blow through with compressed air from inside to outside. Cover the opposite side of the filter element by hand when doing this.
- Wash filter housing with clean diesel fuel.
- Replace seal ring in filter cover.
- After installation, bleed filter and check sealing.