


All engines


At the first maintenance job,
then every 45 000 km / 30 000 miles

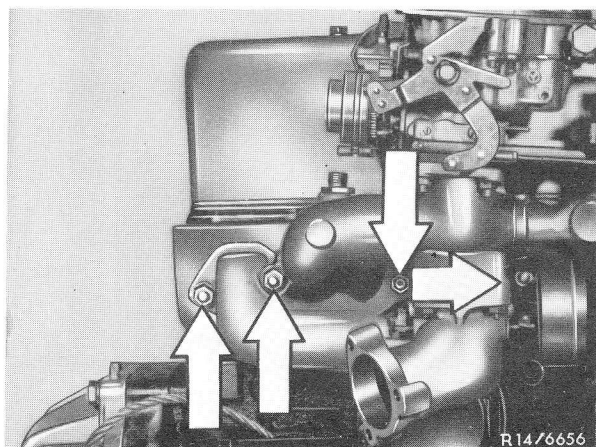

- Retighten all nuts and bolts of the intake and exhaust manifolds on the cylinder head.

Note

On engine M 110 the nuts of the intake and exhaust manifold at the cylinder head need **no longer** be retightened because of their separate arrangement.

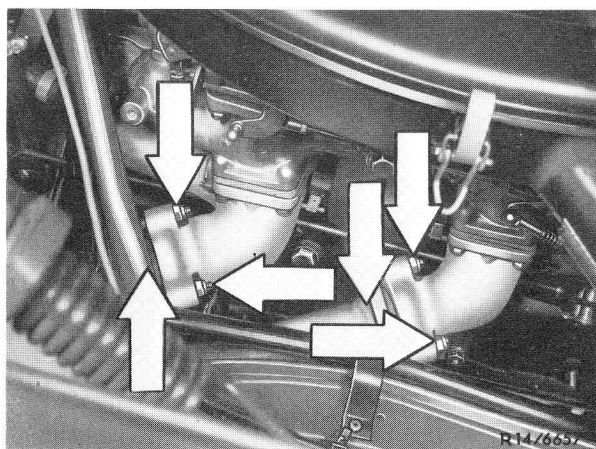

- Retighten bolts of exhaust flanged connections.

Except flanged connections with spring pretension.