

## Special Tool

Inspecting fixture

115 589 06 23 00

## Removal

**1** Remove semi-trailing arm and press rubber mount out of semi-trailing arm (35.1–310).

## Installation

**3** Press in rubber mount and install semi-trailing arm (35.1–310).

## Inspection

**2** Inspect semi-trailing arm and replace if a deviation in relation to fixture shows up (Fig. 1).

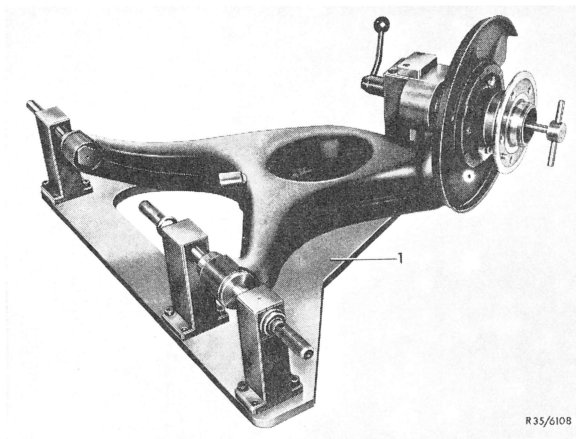


Fig. 1

1 Inspecting fixture